

---

---

## **Lighted Musical Butterfly #3192**

---

---

### **USER'S GUIDE**



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

[www.enablingdevices.com](http://www.enablingdevices.com)

### *Visually stimulating!*

Spin the colorful textured carousel and listen to six soothing songs while watching the beautiful purple butterfly light up. The toy provides a fantastic tactile and auditory experience. Size: 10½"L x 10½"W x 7"H. Requires 4 AAA and 2 AA Batteries. Weight: 2½ lbs.

#### **Operation:**

1. The Lighted Musical Butterfly requires 4 AAA & 2 AA size batteries. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartments are located on the underside of the unit. To install the batteries, turn the unit over and remove the small Phillips head screws from the black battery cases. Next slide the covers off.
3. Install the batteries, following proper (+) & (-) battery polarity. Replace covers and screws. Mounted on a Lazy Susan base allows users the ability to spin the Lighted Musical Butterfly for easy access to all of the textures. Turn the On/Off/Volume knob and set to an audible level. Turn Off when not in use to prevent battery drain.
4. The Lighted Musical Butterfly plays six different melodies. When you push anywhere on the textured top it will play one of six melodies while the butterfly illuminates. The melodies will play in its entirety; once the music stops another activation of the textured carousel will play the next melody.

#### **Troubleshooting:**

**Problem:** The units sounds melodies or lights fails to operate, or operates incorrectly.

**Action:** Check all batteries making sure they are installed with proper (+) & (-) battery polarity.

**Action:** Check that all batteries are fresh, if not replace with new batteries.

**Problem:** top plate seems to be stuck / jammed.

**Action:** visually inspect the switch plate area underneath, making sure there is nothing obstructing or blocking the plate from moving freely.

#### **Care of Unit:**

The Lighted Musical Butterfly can be wiped clean with any household multi-purpose cleaner or disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner. Use caution not to get cleaning fluid or any liquid under the plate areas.

**Do not submerge** the unit, as it will damage the electrical components.

**Do not use abrasive cleaners**, as they will scratch the surface of the unit.

**Do not jam** the plates in with force, as this may damage that component.