



Photo No.1

Photo No. 2



Photo No.3

**enabling**  
devices

**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)

---

---

## Musical Twister #3285

---

---

### USER'S GUIDE

**enabling**  
devices

50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

### ***Watch a funnel form!***

Activate your switch and multi-colored glitter starts to twirl while music plays. Soon the funnel of a twister begins to form before your very eyes, creating a fantastic visual effect. Great for improving visual attention and for encouraging listening skills. Comes with two different choices for switch activation – on/off or momentary. Item is clampable to a table, clamps sold separately see item #2025. Size: 9"L x 9"W x 16"H. Requires 6 C Batteries. Weight: 6 lbs.

1. Musical Twister requires 6 C batteries (not included). Use Alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. The battery compartments are located under the unit's base. Gently turn the unit over to reveal battery compartments. Carefully remove the small screw from each of the battery compartment covers using a Phillips head screwdriver, and then slide the battery compartment covers off. Install batteries into each holder. When installing new batteries, always be careful to observe battery polarity. Replace battery covers and screws. Never mix old and new batteries together or different brands or types together.
2. Next you will need to add the glitter and fill Musical Twister with water. We have included two table spoons worth of glitter only one table spoon full is needed; keep the second as a spare. **Please Note:** Use distilled water only. This will prevent any alga growth inside the water tank. To fill the tank, carefully lift and remove the top plug as shown in (Photos 1 & 2). You may have to wiggle the plug as you pull up. **Please Note:** There is a notch cut out of the plug, the cut side needs to face toward the inside of the tube to make a flush seal with the top of the tube. Use the included funnel to fill the tube with water up to indicated fill line marked on the back of the tube. Do not over fill past this point.
3. Turn the ON/OFF/VOLUME knob clockwise, you will hear an audible click. Adjust to knob for desired volume level. Set the Toggle control switch to Latch or Momentary.
4. Plug, any capability switch into the switch jack located on the side of Musical Twister. Make sure the switch is plugged in all the way, with no gaps. Next select either **Momentary** (will require sustained activation

of the switch for Musical Twister to keep playing) or **Latch** (one activation or press of your switch and Musical Twister will continue to play until a second activation is made by your switch). You will be rewarded with illuminated colorful glitter spinning around in the water, while listening to soothing music.

5. When you are finished using Musical Twister turn the ON/OFF/VOLUME knob OFF to prevent battery drain. For prolonged storage one month or more we recommend removing the batteries. If you would like to drain the water make sure to use a strainer to catch the glitter and prevent them from going down the drain.

### **Troubleshooting:**

**Problem:** Musical Twister does not spin the water and glitter or light up.

**Action #1:** Check the Batteries for strength and for proper battery polarity. Replace if weak or dead.

**Problem:** Musical Twister does not play music.

**Action:** Check the Batteries for strength and for proper battery polarity. Replace if weak or dead.

**Problem:** Musical Twister does not work at all.

**Action #1:** Check all Batteries for strength and for proper battery polarity. Replace if weak or dead.

**Action # 2:** Make sure all connections are tight.

**Action # 3:** Check your switch with another device you know is working.

### **Care of the Unit:**

Musical Twister can be wiped clean with any household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not use** abrasive cleaners, as they will scratch the surface of the unit.

**Do not submerge** the unit, as it will damage the electrical components.