



enabling
devices

For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com

Harbor Breeze #3288

USER'S GUIDE

enabling
devices

50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

www.enablingdevices.com

A day near the sea!

Press the blue switch and the red windmill blade starts to spin while the top lights up. Feel a cool breeze and hear upbeat music and harbor sounds – waves crashing, seagulls calling and bell buoys ringing. Can also be activated by your own external capability switch. Great for teaching cause and effect, for developing sensory awareness, and for encouraging listening skills. Size: 8½"D x 14"H. Requires 2 C and 4 AA Batteries. Weight: 2 lbs.

Operation:

1. Harbor Breeze requires 2 C batteries and 4 AA batteries (Not included). Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartments are located on the bottom of the unit. To remove the battery compartment covers, unscrew the small Phillips Head screw on each of the black battery cases, and then slide the covers off. Install new batteries, being careful to observe proper (+) & (-) battery polarity. Replace covers and screws. Turn the On/Off/Volume knob clockwise to turn the unit On.
3. To attach the fan blade to the Windmill, hold the blade by the black plastic shaft, not the blades and press it firmly onto the motor shaft on the Windmill. Push it all the way on. There will be a slight gap, this is normal. (See photos on Back page).
4. Push on the blue gumball switch or activate your own external switch and watch the windmill blades go round and round to feel the gentle breeze while ocean sounds and music plays. Connect Harbor Breeze to any external capability switch via the jack, located on the side of the unit. Harbor Breeze is equipped with a 1/8-inch jack, for use with capability switches with a 1/8-inch

plug. If you need to use a 1/4- to 1/8-inch adapter, it must be a mono adapter, like our #1170, not stereo.

5. If you are using an external capability switch, make sure that the connections between the external capability switch and the adapter (if applicable) and the jack on the Harbor Breeze are plugged in all the way. There should be no gaps.

Troubleshooting:

Problem: Harbor Breeze does not work.

Action #1: Make sure the On/Off/Volume is turned ON and the Volume is set to an audible level.

Action #2: Check all batteries for proper (+) & (-) battery polarity.

Action #3: Check to make sure nothing is blocking or restricting the movement of the activation switch.

Action #4: Try your external capability switch with another toy/device to rule out the switch as the source of the problem.

Action #5: Replace any dead or weak batteries with fresh new batteries. Never mix different brands or old and new batteries.

Care of Unit:

Harbor Breeze can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non-toxic biodegradable all-purpose cleaner.

When finished playing with the Harbor Breeze turn the On/Off/Volume knob to Off to help prevent battery drain. For prolonged storage we recommend removing the batteries.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.