



enabling
devices

For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

customer_support@enablingdevices.com

Sensory Projector #3390

USER'S GUIDE

enabling
devices

50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

www.enablingdevices.com

Promote relaxation!

Soft and soothing red, blue and green lights slowly move across your ceiling and walls to create a calming effect in any room. Angle of the projector can be adjusted a full 180 degrees. Can be used on a tabletop or can be wall or ceiling mounted (mounting plate and hardware included). Adjustable speed control and on/off switch and uses an AC adapter (included). *Size: 10"L x 9"W x 5½"H. Weight: 2¼ lbs.*

Operation:

1. The Sensory Projector requires AC power. Plug the AC adapter into a 110 Volt outlet.
2. You can adjust the angle of the projector a full 180 degrees. Adjustment is made by loosening the two thumb knobs on either side of the projector. After adjusting the angle tighten the thumb knobs to lock it in place. (See Photo).



3. To activate the Sensory Projector, turn the ON/OFF toggle switch to ON. There is also an adjustable speed control knob. Clockwise increases the speed of the lights and counter-clockwise decreases the speed. When finished using the Sensory Projector turn the unit OFF.

Please Note: Do not look directly into the Sensory Projector's light source, the light is very strong and could hurt your eyes by looking at it for any sustained amount of time.

4. The Sensory Projector can also be wall mounted with the included mounting plate and hardware. **Please Note:** Included mounting wall anchors are for mounting to drywall, if you are mounting the Sensory Projector to other surfaces consult a contractor or home improvement center for the appropriate mounting hardware needs.
5. First you will need to mount the mounting plate to your wall with the 4 screws included. Use the mounting plate as a template to make the 4 holes that need to be drilled for the wall anchors. You will need a ¼ inch drill bit for the included wall anchors. After the mounting plate is secured to the wall with the 4 screws you can now attach the Sensory Projector to the wall plate with the 4 machine screws stored in each of the mounting posts, also included (See Photos on back page of this guide).

Troubleshooting:

Problem: Sensory Projector does not function correctly.

Action #1: Make sure you have the AC power adapter plugged into a working 110 Volt outlet and that it is plugged in all the way.

Action #2: Make sure that Sensory Projector's ON/OFF switch is turned ON.

Care of Unit:

The Sensory Projector can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non-toxic biodegradable all-purpose cleaner.

Please unplug the Sensory Projector from the AC wall outlet before any cleaning of the Sensory Projector is done to prevent electrical shock.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Do not submerge the unit, as it will damage the electrical components.