



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697
customer_support@enablingdevices.com

Tabletop Frosted Tube #3391

USER'S GUIDE



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Rotating patterns of color!

Our Tabletop Frosted Tube creates a calming visual and auditory sensory experience. Just press and hold your capability switch and colorful red, blue and green lights will whirl and light up the tube while soothing music plays. Remove the top and the lights will spin and glow on your ceiling. Also great for teaching cause and effect. Has on/off switch and volume control. Size: 9"L x 9"W x 16"H. Requires Capability Switch and 6 C Batteries. Weight: 3 lbs.

1. Tabletop Frosted Tube requires 6 C batteries (not included). Use Alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. The battery compartments are located under the unit's base. Gently turn the unit over to reveal battery compartments. Carefully remove the small screw from each of the battery compartment covers using a Phillips head screwdriver, and then slide the battery compartment covers off. Install batteries into each holder. When installing new batteries, always be careful to observe battery polarity. Replace battery covers and screws. Never mix old and new batteries together or different brands or types together.
2. Turn the ON/OFF/VOLUME knob clockwise, you will hear an audible click. Adjust to knob for desired volume level. Next plug, any capability switch into the switch jack located on the side of Tabletop Frosted Tube. Make sure the switch is plugged in all the way, with no gaps. Just press and hold your capability switch and colorful red, blue and green lights will whirl and light up the tube while soothing music plays. Remove the top and the lights will spin and glow on your ceiling (See Photo on back page of guide). Also great for teaching cause and effect.
3. When you are finished using Tabletop Frosted Tube turn the ON/OFF/VOLUME knob OFF to prevent battery drain. For prolonged storage one month or more we recommend removing the batteries

Please Note: If the user cannot sustain their switch you can use any switch with a built in latch & timer function or a Latch & Timer module such as our #605. Our On/Off Jumbo Switch #7805 will also work.

Troubleshooting:

Problem: Tabletop Frosted Tube does not light up or play music.

Action: Check the Batteries for strength and for proper battery polarity. Replace if weak or dead.

Problem: Tabletop Frosted Tube does not work at all.

Action #1: Check all Batteries for strength and for proper battery polarity. Replace if weak or dead.

Action # 2: Make sure all connections are plugged in all the way. There should be no gaps.

Action # 3: Check your switch with another device you know is working.

Care of the Unit:

Tabletop Frosted Tube can be wiped clean with any household multi-purpose, non-abrasive cleaner and disinfectant.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Do not submerge the unit, as it will damage the electrical components.