
CD Player #342

(Unirex Model)

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

customer_support@enablingdevices.com



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

www.enablingdevices.com

Finally, a switch-adapted CD player!

A portable CD player that can be easily operated by your switch! The CD function starts and pauses with each switch activation. AM/FM radio function is not switch-adapted. (Not available for momentary switch operations). Size: 6"L x 5"W x 1"H. Requires Capability Switch and 2 AA Batteries. Weight: ¾ lb.

Operation:

1. The CD Walkman requires 2 "AA" batteries (Not included) to operate. Use alkaline batteries (e.g. Duracell or Energizer brand). Rechargeable batteries can be used if the proper type (1.2 Volt 650mA Nickel-Cadmium Never mix old and new batteries together or different brands or types together.
2. Note:
 - **Do Not try to recharge Non-Rechargeable batteries in this CD player, doing so will cause the batteries to explode and void your warranty.**
 - **Remove the batteries when you do not plan to use the unit for a month or more. On the bottom of the unit there is an ON/OFF charger switch, this must be set to OFF when alkaline batteries are being used.**
 - **For charging rechargeable batteries please see original manufactures instructions.**
3. Open the CD compartment by pressing the "OPEN" button located on the top portion of the unit and slightly to the left, labeled "OPEN". Insert your CD, label side up, over the center hub of the disc and gently press the center of the CD until it snaps down. Gently close the compartment door.
4. Plug your Headphones into the jack marked (PHONES). Adjust the VOLUME to an audible level. There is also a (LINE OUT) jack for use with external speakers which can be purchased at any electronics store. On the bottom of the unit there is a selector switch for (Bass Boost) which increases the bass sound in the music.

5. There is one adapted switch outlet cord located on the right side of the unit. Insert a capability switch into the outlet. (Female outlet accepts only 1/8"plug)
6. When the Capability Switch you have chosen is activated the CD player will turn ON. It will then display the number of tracks that your CD has, then the CD will start to play the first track. Press the switch again to pause the track.

Please Note: Switches or switch modifiers having Latch/Timer features cannot be used with this mode CD player due to adaption. The functions will not work.

7. Please refer the manufactures instructions for information on the CD Walkman's Additional functions and features.

Troubleshooting:

Problem: The CD does not function.

Action:

- Check batteries for polarity placement and be sure to use fresh batteries.
- Keep mobile phones and other electrical appliances far away from the unit. Such appliances may cause noise interference or play may stop entirely.
- Be sure the VOLUME control is adjusted to an audible listening level.

Note:

- If a CD skips it may need cleaning. Wipe off any fingerprints with a soft cloth.
- Do not get wet. Follow manufacturer's recommendations for cleaning.