Ideal for quiet time!

For individuals placed on a Side-Lyer, reaching out can often be frustrating. This brightly-colored toy takes away the hassle and makes it fun! The panel vibrates and lights-up when lightly touched and the bead chains provide wonderful somatosensory stimulation. Size: $23\frac{1}{4}$ "L x $12\frac{1}{2}$ "W x 11"H. Requires 2 C Batteries. Weight: $2\frac{3}{4}$ lbs.

Operation:

- 1. The Side-Lyer Toy requires two "C" size batteries. Alkaline batteries are recommended because they last longer. Do not use rechargeable batteries because they supply lower voltage and the unit may not perform as well.
- 2. The battery compartment is located at the back of the side-lyer. To remove the battery compartment cover, slide your fingers in the finger holes at the back of the unit and gently pull the cover upward.
- 3. Install new batteries, being careful to observe proper battery polarity. Replace the battery compartment cover by inserting one end of the cover into the end slot. Then, carefully bend the cover slightly upward in the center and slip the other end of the cover into the other end slot.
- 4. Slip the long blue panel under a mattress, pad, sidelyer tumble form or any other appropriate padded surface. It would be uncomfortable for a child to lie directly on the blue plastic.

- 5. When you gently press on the yellow plate, you will be rewarded with lights and vibration. The lights and vibration will continue as long as you maintain pressure on the yellow plate. Once you release pressure, the lights and vibration will stop.
- 6. You can also play with the bead chains attached to the yellow plate.

Troubleshooting:

Problem: The unit fails to operate, or operates incorrectly.

Action: Replace batteries paying close attention to proper battery polarity

Problem: The toy runs constantly.

Action: Make sure that the mattress, pad or whatever else you are using is not pressing on the yellow plate.

Care of Unit:

The Side-Lyer Toy can be wiped clean with any household multi-purpose cleaner and disinfectant.

Do not submerge the unit, as it will damage the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Side-Lyer Toy #352

USER'S GUIDE



For Technical Support:

Call our Technical Service Department Monday through Friday, 9 a.m. to 5 p.m. (EST) 1-800-832-8697

customer support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com