
Talking Square Containerizing Toy

A fantastic teaching tool!

All the benefits of the round containerizing toy but more blocks and more places for sorting, stacking and dropping! All sides of the square have shape-sorting walls. When the object hits the bottom, your pre-recorded message (up to 20 seconds) will play. Take the top off and it will talk when other objects are dropped. Encourages language development, listening skills, shape matching and color recognition. Size: 10¾" L x 7¼"W x 6"H. Requires 4 AA Batteries. Weight: 1¾ lbs.

Operation:

1. Talking Square Containerizing Toy requires 4 AA batteries to operate. Alkaline batteries are recommended because they last longer. Do not use rechargeable batteries because they supply a lower voltage and unit may not perform as well. Be careful to check for Polarity, matching positive pole to positive marking and negative pole to negative marking in the battery holder.
2. To prepare for play, turn the round black VOLUME knob to the right. It is located on the underside of the container.
3. To record, depress and hold down the blue bar shaped RECORD button.
4. Speak clearly into the round black and silver microphone located on the side of the Containerizing toy. Speak from about 8"-12" away for best vocal quality.
5. To adjust the sensitivity:

To increase turn black knob clockwise.

To decreases sensitivity turn black knob counterclockwise.

Troubleshooting:

Problem: The unit does not function.

Action: Be sure to use fresh batteries, paying close attention to battery polarity. (Match the positive battery pole to the positive end of the battery holder, nearest the spring. Match negative to negative).

Problem: The unit did not record the message, even though the record button was held down.

Action: Be sure the On/Off button is turned on, that is, in a clockwise direction.

Problem: The child placed an object into the container but the recorded message did not come on.

Action: The container is built with a sensitivity control switch. The object placed into the container must have a density high enough to signal the switch to operate the recording. Do not use cotton balls or other very lightweight objects.

Note:

- Do not allow child to play with this toy unsupervised
- The container should not be thrown. It has sensitive circuitry and banging or falling to the floor can cause damage, and void the warranty.
- Turn off when not in use.
- Do not get wet

**SQUARE CONTAINERIZING
TOY #365**

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697
customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com