
Baby Pug #3929

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697
customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Take him home!

Press and hold your capability switch and this adorable Baby Pug walks forward, scoots backwards and barks. Small, cute and soft. Size: 3"W x 6"L x 5½"H. Requires 2 AA Batteries. Weight: ¼ lb.

Operation:

1. Baby Pug requires 2 AA Batteries to operate. Alkaline batteries must be used (e.g. Duracell or Energizer Brands). Do not use rechargeable batteries because they supply a lower voltage and the unit may not perform as well. Never mix old and new batteries together or different brands or types together.
2. Turn Baby Pug upside down to reveal the battery compartment. Remove the small screw with a Phillips Head screwdriver. Install 2 AA batteries paying close attention to proper battery polarity. Replace the battery compartment cover and screw.
3. Connect Baby Pug to any external capability switch (not included) via the jack located at the end of Baby Pug's cord. Baby Pug is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure to plug your switch all the way in. There should be no gaps.
4. Actuate your external capability switch and Baby Pug will spring to life! He walks forward and backwards, barks and wags his tail.
5. Baby Pug will remain on while the external capability switch continues to be actuated. Once you release the external capability switch Baby Pug will turn off.

Troubleshooting:

Problem: Baby Pug does not function correctly.

Action #1: Replace the batteries paying close attention to proper (+) & (-) battery polarity.

Action #2: Make sure that the connection between the external capability switch and the jack is TIGHT. There should be NO gaps.

Action #3: Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

Care of Unit:

- Do not inhibit Baby Pug's movement, as this may cause irreversible damage.
- Do not lift Baby Pug up by his head, tail or legs, or drop Baby Pug.
- If you will not be using Baby Pug for an extended amount of time, we recommend removing the batteries.

Do not submerge the unit in water, as it will damage the electrical components. Baby Pug is surface washable only.