

---

---

## Gel Pad Activity Center #3951

---

---

### USER'S GUIDE



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697  
[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

### *Exploring is fun!*

Our Activity Center is a fun-filled stimulating busy box. Three different gel pad switches provide wonderful opportunities for exploration. Press the green switch and a fan blows while music plays. Press the red switch and a police light flashes while sirens play and police talk. The yellow switch vibrates while colorful glitter whirls around a dome and music plays. Provides terrific auditory, tactile and visual experiences. Size: 23½"L x 14"W x 6"H. Requires 6 C & 9 AA Batteries. Weight: 4½ lbs.

#### **Operation:**

1. The Gel Pad Activity Center requires 6 C batteries and 9 AA batteries (Not included). Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartments are located on the bottom of the unit. To remove the battery compartment covers, unscrew the small Phillips Head screw on each of the black battery cases, and then slide the covers off. Install new batteries, being careful to observe proper (+) & (-) battery polarity. Replace covers and screws. Turn the ON/OFF/ Volume knobs ON and adjust volume to the desired level.
3. Press the green Gel Pad and a fan blows while music plays. Press the red Gel pad and a police light flashes while sirens play and police talk. The yellow Gel Pad vibrates while colorful glitter whirls around a dome and music plays.

**Please Note:** For proper operation of all functions all three ON/OFF/VOLUME control knobs need to be turned ON. You can adjust the volume (e.g. turning the volume down) if you don't want the sound or music.

#### **Troubleshooting:**

**Problem:** The Gel Pad Activity Center's sounds or music output does not work.

**Action #1:** Make sure the ON/OFF knob for the pad you are activating are turned ON and the Volume is set to an audible level.

**Action #2:** Make sure all the ON/OFF switches on the C battery compartments are set to ON.

**Action #3:** Check all batteries for proper (+) & (-) battery polarity.

**Action #4:** Check to make sure nothing is blocking or restricting the movement of the Gel pads.

**Action #5:** Try replacing one or both sets of 4 AA batteries with fresh new batteries. Never mix different brands or old and new batteries.

**Problem:** There is no vibration or fan.

**Action:** Follow previous actions.

#### **Care of Unit:**

The Gel Pad Activity Center can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

When finished playing with the Gel Pad Activity Center turn the ON/OFF switches to OFF to help prevent battery drain. For prolonged storage we recommend removing the batteries.

**Do not submerge** the unit, as it will damage the contents and the electrical components.

**Do not use abrasive cleaners**, as they will scratch the surface of the unit.