



Care & Maintenance:

1. Keep the Bluetooth/MP3 Audio Center clean by wiping it with a slightly damp cloth when needed. It can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non-toxic biodegradable all-purpose cleaner.
2. Keep the Bluetooth/MP3 Audio Center out of direct sunlight and away from any direct heat source.
3. Do not drop the Bluetooth/MP3 Audio Center on a hard surface and do not expose it to moisture or immerse it in water.



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697
customer_support@enablingdevices.com

Bluetooth/MP3 Audio Center #4090

USER'S GUIDE



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Easy-touch buttons!

Enjoy your music with any Bluetooth enabled device – smartphone including Android, iPad, tablet, laptop, iPod and MP3 Player. Our five easy-touch switches allow you to control your songs: On/Off, Volume Up and Down, Track Back and Forward, Play/Pause and Mode change. Has premium quality audio with super bass and 3W speaker output as well as a microphone for receiving phone calls. A headphone jack allows you to listen quietly to your music (headphones not included). A built-in Micro SD card slot also allows you to play audio saved on your SD card (not included). Rechargeable battery lasts up to 5 hours and charges via USB (cord included).

Please Note: Computer required to download music to Micro/SD card & USB Drive.

Operation:

1. The Bluetooth/MP3 Audio Center has a built in rechargeable battery, which is charged through your computer via the included USB cable or using the included cable with any Tablet or Smartphone wall charger for faster charging. You can use the Bluetooth/MP3 Audio Center during charging.
2. To charge your Bluetooth/MP3 Audio Center, plug it into a USB port on your computer while the computer is on or using the USB cable or a better way to charge it is with a Table or Smartphone wall charger. The LED light will glow red while charging with the power OFF or glow pink with the power ON. When charging completes, the light will go OFF with the power OFF or glow blue with the power ON.

Modes of Play:

The Bluetooth –MP3 Audio Center can playback music via Bluetooth, MicroSD/TF card, USB Stick drive, USB/AUX via cable plugged into a PC or powered external drive or audio ear phone jack via 1/8 inch to 1/8 inch stereo cable plugged into any audio device with an earphone jack or line-out jack. Press the big Mode button to change modes. You will hear an audio prompt for each mode.

Please Note: FM Mode does not function on this device.

Please Reference the original manufacture instructions for all of the Bluetooth/MP3 Audio Center functions and features and any additional troubleshooting info.

Please Note: Some features or functions listed in the original manufactures instructions may not work due to switch adaption.

3. To listen to music stored on a MicroSD/TF card or USB Drive, insert the card or drive into the appropriately marked slot on the back of the MP3 Control Center (See Photos on back of guide). Turn on the MP3 Control Center's On/Off switch On. Press the big "Play" switch on the base. Press it again to pause the music. Press the "Track Forward" or "Track Backward" switches to skip between songs. To adjust volume, use the "Vol +" or "Vol –" switches by pressing and holding them down to raise or lower the volume level.
4. When you are finished using the MP3 Control Center make sure to press the big button ON/OFF switch on the base and also turn the small ON/OFF switch on the side of the MP3 Control Center's speaker to prevent the battery from draining down all the way. If not and the battery drains out and left in this state could cause damage to the battery.

Troubleshooting:

Problem: Bluetooth/MP3 Audio Center does not work.

Action #1: Make sure you have charged the Bluetooth/MP3 Audio Center. Red LED ON: Charge, Red LED OFF: Full Power & Red LED Flashing: Low Power.

Action #2: Make sure that there is nothing inhibiting the depression of the button switches or holding any of the button switches down.

Action #3: Try reloading your music on the MicroSD/TF card, USB drive or try a different MicroSD/TF card, USB Drive to rule this out as the issue.