

# Plug & Play Air Mouse



4301



4301B

## Catalog #4301 & #4301B Bundle

**enabling**  
devices


50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

### *Hands free!*

Simple hands-free mouse allows you to control your computer's cursor using head movements and switch activations. Get full screen movement of cursor, left click, right click, and on/off lock. Easy installation – just plug and play. Includes Remote with three cords for connecting to capability switches, an adjustable elastic head strap, and wireless USB receiver. Requires 2 or 3 capability switches – use your own switches or purchase the Air Mouse with our three Switch Control Center (below). Air Mouse works with Windows XP, 7 & 8 MAC OS 10, Linux 9.0+ and Android 4.0 or newer & Chrome OS. Remote size: 4<sup>3</sup>/<sub>4</sub>"L x 1<sup>1</sup>/<sub>4</sub>"W x 1"H; Control Center size: 10"L x 4"W x 2"H. Requires rechargeable 3.7 V Lithium Battery (included). Weight: ½ lb. each.

### **OPERATION:**

1. The Plug & Play Air Mouse uses a non-removable 3.7 Volt Lithium Battery. To charge the Plug & Play Air Mouse use the included USB cord and plug it into your computers USB port or you can use the cord with a smartphone or tablet USB AC wall charger (See Photo #1). While charging the LED light on the Plug & Play Air Mouse will be Red, when fully charged it will turn Blue and then turn Off. It can take from 1 to 3 hours for a full charge.

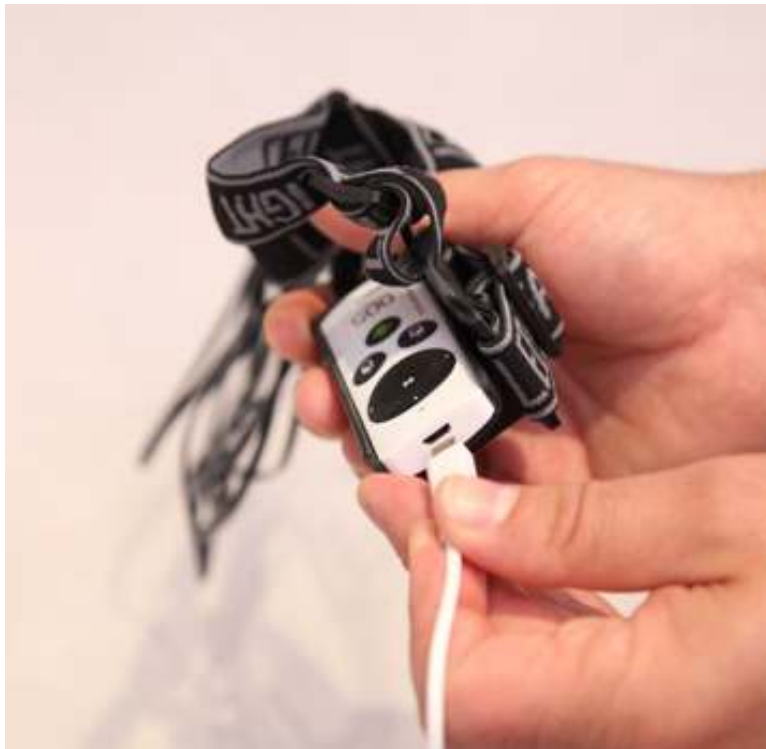 

**Photo #1**


2. Next you will need to plug in from one to three external switches into the labeled input jacks. Make sure when you plug your switch into the jack that it is plugged in all the way. There should be no gaps (See Photo #3). One jack is labeled ON/OFF/Lock, this will turn ON or wake up the Plug & Play Air Mouse and also lock the cursor in position on the screen. **Please Note:** To conserve battery power the Air Mouse will go to sleep after 2 minutes of inactivity. Activating any switch will wake the Air Mouse. The Lock function is used to re-center your mouse cursor if it seems to drift off course. On Chrome OS which has many assistive accessibility built into it you can use a Chrome OS device such as a Chromebook, Chromebox or Chromebase with just one switch and the Plug & Play Air Mouse.



Photo #2

3. There is also a jack for each the Right and Left Mouse function. You can use any external switches with the Plug & Play Air Mouse or use the 3 button switch included in the #4301B Bundle or sold separately item #9403 Three Switch Control Box.
4. The small USB receiver or dongle of the Plug & Play Air Mouse plugs into one of your computers USB ports, there are no drivers or software to install hence the name Plug and Play Air Mouse. Your computer will auto detect it. If you want to use the Plug & Play Air Mouse with an Android device running Android 4.0 or newer plug the USB receiver into the Android's USB port such as an Android Set-Top Box. If your Android device does not have a full sized USB port you can use an adapter called an OTG cable which will plug into your Androids micro USB port and give you USB port access.

5. If the Plug & Play Air Mouse ever becomes unresponsive even after charging, you can try re-setting it by using the end of a small paperclip or pin. Turn the Air Mouse over and push the re-set button in once with the paperclip or pin. (See Photo #3)

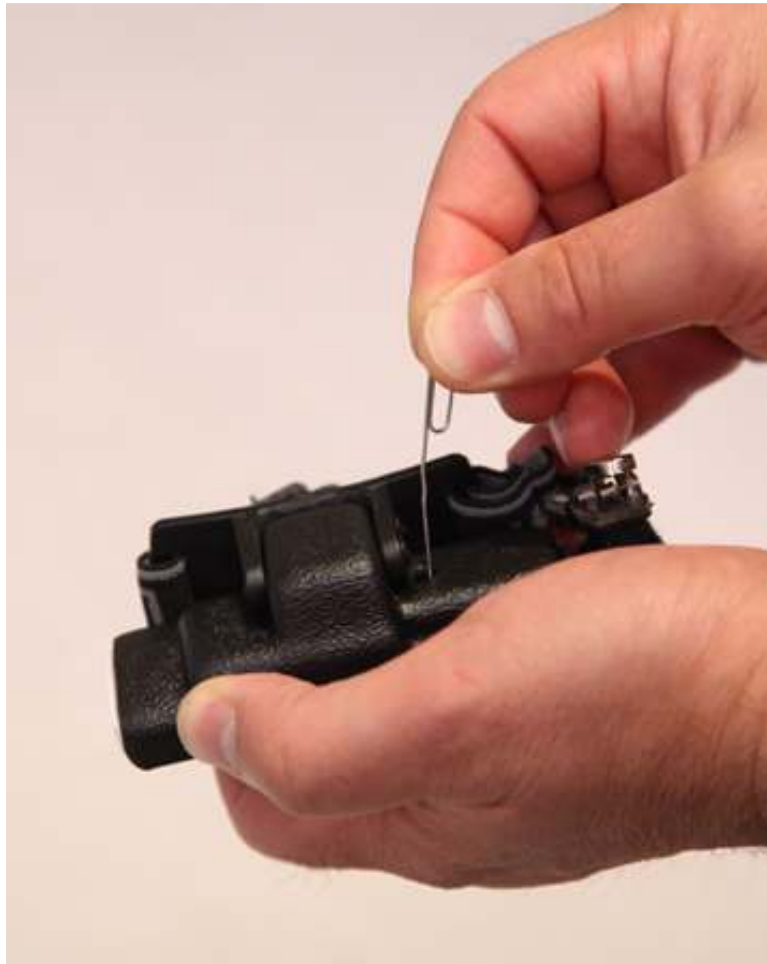 

**Photo #3**

6. **Calibration:** When the cursor appears to drift, and you can't use the Air Mouse to control the cursor, you will need to calibrate the Air Mouse.

With the USB receiver plugged into the computer you are working with, press the left arrow key and the down arrow key on the Air Mouse at the same time. The LED will turn off on the Air Mouse, indicating the calibration was successful.

7. Our adjustable head strap allows you to make adjustments for a comfortable fit and for use with a wide range of users. Position the strap on the person's head much like when putting on a baseball cap. In addition we have a Velcro strapped clip so you can clip it to a shirt to secure all cabling and keep it out of the way(See Photo #4).



Photo #4

**Cleaning Information:**

- You can clean the Plug & Play Air Mouse with a clean soft cloth **“ONLY”**, do not use any type of cleaner on the Plug & Play Air Mouse, doing so will damage the unit and void your warrantee. You can lightly dampen the cloth if needed to clean the Plug & Play Air Mouse.

Do not submerge the unit, as it will damage the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

**Troubleshooting:**

- Make sure the Plug & Play Air Mouse is fully charged.
- If the cursor is out of control, you can try calibrating the Plug & Play Air Mouse. Plug the supplied USB cord into the Plug & Play Air Mouse and the USB end into your computer. Press the Left and Right simultaneously, the LED indicator will light up and then turn off indicating the calibration was successful.
- Make sure that the all connections are plugged in all the way, with no gaps.
- Try your switch with another device to rule out the Plug & Play Air Mouse as the source of the problem.
- If you have tried ALL of the above contact our Tech Support Department at 1-800-832-8697 ext. 320 or via email at: [customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)