

---

---

## St. Bernard Puppy #437

---

---

### USER'S GUIDE



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

[www.enablingdevices.com](http://www.enablingdevices.com)

### ***Bow Wow!***

Take your St. Bernard Puppy for a walk. He moves and wags his tail while barking. He is a wonderful pet to have, so soft and cuddly, and helps to increase directionality skills. Size: 7½"L x 3¾"W x 7"H. Requires Capability Switch and 2 AA Batteries. Weight: 1 lb.

#### **Operation:**

1. St. Bernard Puppy requires 2 AA Batteries to operate. Alkaline batteries must be used (e.g. Duracell or Energizer Brands). Do not use rechargeable batteries because they supply a lower voltage and the unit may not perform as well. Never mix old and new batteries together or different brands or types together.
2. Turn St. Bernard Puppy upside down to reveal the battery compartment. Remove the small screw with a Phillips Head screwdriver. Install 2 AA batteries paying close attention to proper battery polarity. Replace the battery compartment cover and screw.
3. Connect St. Bernard Puppy to any external capability switch (not included) via the jack located at the end of St. Bernard Puppy's cord. St. Bernard Puppy is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure to make a tight connection. There should be no gaps.
4. Actuate your external capability switch and St. Bernard Puppy will spring to life! He walks forward, backwards, barks and wags his tail.
5. St. Bernard Puppy will remain on while the external capability switch continues to be actuated. Once you release the external capability switch St. Bernard Puppy will turn off.

#### **Troubleshooting:**

**Problem:** St. Bernard Puppy does not function correctly.

**Action #1:** Replace the batteries paying close attention to proper (+) & (-) battery polarity.

**Action #2:** Make sure that the connection between the external capability switch and the jack is TIGHT. There should be NO gaps.

**Action #3:** Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

#### **Care of Unit:**

- Do not inhibit St. Bernard Puppy's movement, as this may cause irreversible damage.
- Do not lift St. Bernard Puppy up by his head, tail or legs, or drop St. Bernard Puppy.
- If you will not be using St. Bernard Puppy for an extended amount of time, we recommend removing the batteries.

**Do not submerge** the unit in water, as it will damage the electrical components. St. Bernard Puppy is surface washable only.