
Game Spinner #4542

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Light touch!

This versatile Game Spinner allows you to play hundreds of different games – both educational and just for fun. Create games with numbers, letters, colors, pictures or words. The spinner is activated either by pressing the sides or lip or by activating your capability switch. Twelve blank templates are included for creating your games. Size: 8"Diameter x 1¾"H. Requires 2 AA Batteries. Weight: 3/4 lb.

Operation:

1. The Game Spinner requires two AA batteries. The battery compartment is located under the base of the unit. Carefully turn the spinner over, and then remove the battery cover with a small Philips screwdriver. Install new batteries, being careful to observe proper battery polarity. Alkaline batteries are recommended because they last longer.
2. Turn the Game spinner's **ON/OFF** switch to the **ON** position, when finished playing turn the spinner **OFF** to prevent battery drainage. The spinner can be activated two ways. First by pressing the sides or by activating your capability switch (not included). An external jack is provided so players can use their switch. Plug your switch into the jack all the way, making sure there is no gap in the connection. Activating your switch or pressing on the sides of the spinner will make the spinner turn, once you release your switch or the sides of the spinner it will stop on one of the locations.
3. The Game Spinner comes with 12 blank Spinner templates so you can create your own game templates. Each blank template has a slit down one side; this is to allow you to slip the template on to the Game Spinner's top under the directional arrow.

Troubleshooting Spinner:

Problem: The Spinner does not activate by pressing on the sides or your switch.

Action #1: Make sure that the connection between the spinner and your switch (if applicable) are tight. There should be *no* gaps. This is a common error and an easy fix.

Action # 2 Make sure the batteries are in the battery compartment properly, and making good contact. Replace if weak or dead.

Action 3: Try a different switch with the spinner (if applicable) to rule out this as the source of the problem.

Action #4: Check that no debris or small objects are blocking or obstruction any of the of the spinner movement.

Care of Unit:

The Game Spinner can be wiped clean with any household multi-purpose cleaner and disinfectant.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit