

---

---

## Lighted Musical Tunes #4550

---

---

### USER'S GUIDE



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697  
customer\_support@enablingdevices.com



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

*Vibrates and plays 6 songs!*

Lighted Musical Tunes provides a total multi-sensory experience. Just activate the large 7" textured orange switch plate to experience bright lights and soft vibration while listening to six high-fidelity songs: Rock, Classical, Easy Listening, Latin, New Age & Western. Each song is about 45-50 seconds long. It has adjustable volume control and the vibration can be turned off if desired. Great for teaching cause and effect. Size: 10"L x 10"W x 2¾"H. Requires 6 AA Batteries. Weight: 1½ lbs.

**Operation:**

1. The Lighted Musical Tunes requires 6AA batteries. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. To install the batteries turn the unit over, using a Philips Head screwdriver remove screws and covers. Install AA batteries following proper (+) & (-) battery placement. Replace battery covers and screws. Turn the Lighted Musical Tune's On/Off/Volume switch ON and adjust the volume to an audible level.
3. Pressing down on the large orange switch plate will illuminate the plate along with the accompanying upbeat music. Each time you press the switch the music will change. The light will stay on as long as the plate is depressed, the music will play while the plate is depressed but will stop when it reaches the end of the song. To start playing the next song, release the plate and press down again. Once the switch is released the Lighted Musical Tunes will stop

4. There is also a Vibration feature, to feel vibration when the orange switch plate is activated set the Vibration On/Off switch located on the bottom of the unit to On. Turn Off when not in use.
5. When you are finished using the Lighted Musical Tunes turn the On/Off/Volume switch to Off, this will prevent false activation and help conserve battery power. Leaving it set to On will drain the batteries out completely in a short amount of time.

**Troubleshooting:**

**Problem:** The Lighted Musical Tunes does not work when my switch is activated.

**Action #1:** Make sure that you press all connections firmly together. Any gaps may interrupt electrical connection.

**Action #2:** Make sure batteries are fresh.

**Problem:** The Lighted Musical Tunes works intermittently.

**Action:** Replace the batteries in the Lighted Musical Tunes.

**Care of Unit:**

The Lighted Musical Tunes can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not submerge** the unit in any fluids, as it will damage the contents and the electrical components.

**Do not use abrasive cleaners,** as they will scratch the surface of the unit.