
Spaghetti & Meatballs #4552

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697
customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Fun with food!

Our bead chain spaghetti and wooden meatballs provide a terrific sensory experience. As you drop the strands of spaghetti and meatballs into the bowl, you are rewarded with lights and music. The meatballs are a perfect size for working on improving grasp and strengthening hands. Size: 1 1/4"D x 1 3/4"H. Requires: 2 AA Batteries Weight: 1 3/4 lbs.

Operation:

1. Spaghetti and Meatballs requires 2 AA batteries. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. Gently turn the unit over to face the black battery compartment. Carefully remove the small screw from the battery compartment cover using a Phillips head screwdriver, and slide the cover off. Observing proper (+) & (-) battery polarity, install 2 AA size batteries into the holder. Replace the battery compartment cover and screw.
3. Turn the ON/OFF switch to the ON position. This will turn ON the multi colored LED lights on the top of the bucket. Next place one of the included shape grids on top of the bucket.
4. Each time the user places a Meatball in the bowl they will be rewarded with 5 seconds of music and lights; this will encourage the user to place more Meatballs to continue hearing the music. If the user places another Meatball while the music and lights are playing it will not start the music and lights again. The music and lights needs to stop before placing another meatball into the bowl to be rewarded with music and lights.

Please Note:

When finished playing, turn the ON/OFF switch to OFF to prevent draining down the batteries.

Troubleshooting:

Problem: There are no lights or music.

Action #1: Rotate (spin) the batteries within the battery compartment to ensure a good connection. Check that all batteries are installed properly.

Action #2: Check all batteries for freshness, if weak or dead replace with new batteries. Use an alkaline battery (E.G. Duracell or Energizer brand).

Care of the Unit:

Spaghetti and Meatballs can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Do not submerge the unit, as it will damage the electrical components.