

---

---

## Vibrating Pillow #460

---

---

### USER'S GUIDE



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697  
[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

### **Ahhh! What a soft,wonderful feeling!**

Our Vibrating Pillow is an all-time bestseller. The pillow springs into action when activated by an external capability switch. The soothing vibration is great for stimulating tactile awareness and for relieving stress. Size: 14"L x 9½"W x 3½"H. Adapted version requires Capability Switch and both versions require 2 D Batteries. Weight: ¾ lb.

#### **Operation:**

1. To install the two D batteries, you must locate the zipper on the back of the Pillow. Next unzip the opening and separate the opening in the foam pillow to reveal the battery holder. Install the two D batteries paying close attention to proper (+) and (-) polarity. When finished zip pillow closed. **Please Note:** Alkaline batteries are recommended (e.g. Duracell or Energizer brand) Do not use rechargeable or heavy duty batteries as they will not work as well with this device. Never mix old and new batteries together.
2. To use with an external switch, first set the three way Power/Vibration Speed control switch to the center position, this is the OFF position. Connect the Vibrating Pillow to any external capability switch (not included) via the cord jack located at the back side of the pillow. Vibrating Pillow is equipped with a 1/8" female mono jack for use with external capability switches that have a 1/8" mono plug. Make sure you have a tight connection. There should be no gaps.
3. Actuate your capability switch and Vibrating Pillow will gently vibrate. Once you release your external capability switch, Vibrating Pillow will turn off.
4. Vibrating Pillow can also be used without the use of an external capability switch. Set the three way Power/Vibration Intensity control switch to either the Low or High vibration Intensity setting. Vibrating Pillow will continue to run until the switch is turned to the center off position.

**Please Note:** When using the Vibrating Pillow with an external capability switch you cannot change the vibration Intensity setting.

#### **Troubleshooting:**

**Problem:** The Vibrating Pillow does not activate.

**Action #1:** Make sure that all batteries are installed following proper (+) and (-) polarity.

**Action #2:** Replace the batteries with new alkaline batteries (E.G Duracell or Energizer Brand).

**Action #3:** Do not use rechargeable or heavy duty batteries.

#### **Care of Unit:**

The Vibrating Pillow is surface washable only, it can be wiped clean with any mild household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not submerge** the unit, as it will damage the contents and the electrical components.

**Do not use abrasive cleaners,** as they will scratch the surface of the unit.