



Fig. 1



Fig. 2

enabling
devices

For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

customer_support@enablingdevices.com

Flip Flop #503

USER'S GUIDE

enabling
devices

50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

www.enablingdevices.com

Entertains for hours!

Our colorful Flip Flop is terrific to use for increasing visual attention and providing tactile stimulation. With a simple spin of the domes, you will feel vibration, see multi-colored lights flashing, colorful glitter and multi-colored beads spinning inside the dome, reflections in a mirror, and hear six high-fidelity upbeat songs. This versatile toy has two different on/off switches: one to control the music, the other to control the lights, vibration, and beads inside the domes. Size: 12"L x 8½"W x 9½"H. Requires 4 C and 4 AA Batteries. Weight 2¾ lbs.

1. Flip Flop requires 4 C & 4 AA batteries (not included). Use Alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. There are two sets of battery compartments. One set is inside the dome, to access the compartments remove the two Phillips Head screws from dome (see fig.1 & 2 on back page of this guide) separate the two halves of the dome, Please Note: the halves are connected by a cable do not twist or try to separate the cable. Install the 4 C batteries and put the 2 halves back together and secure with screws. The second sets of battery compartments are located under the unit's base. Gently turn the unit over to reveal the battery compartments. Carefully remove the small screw from each of the battery compartment covers using a Phillips head screwdriver, and then slide the battery compartment covers off. Install AA size batteries into each holder. When installing new batteries, always be careful to observe battery polarity. Replace battery covers and screws. Never mix old and new batteries together or different brands or types together.
2. Turn the ON/OFF/VOLUME knob clockwise, you will hear an audible click. Adjust to knob for desired volume level of the music. Push the Push button ON/OFF switch on the dome which controls the lights, spinners and vibration. The Flip Flop can be used one of 3 ways. One with the music and the lights, spinners and vibration. The second with just the music and third with just the lights, spinners and vibration.
3. Simply rotate the dome and you will be rewarded with multi-colored lights flashing, colorful glitter and multi-colored beads spinning inside the dome. The dome also vibrates. When the

music switch is turned on and the dome is spun it will play a musical tune for about 10 to 15 seconds. When the tune finishes playing the next time the dome is spun a new tune will play. There are 6 different tunes.

Troubleshooting:

Problem: Flip Flop's lights, spinners or vibration do not work when the dome is spun.

Action #1: Make sure the dome's ON/OFF push button is turned ON.

Action #2: Check the Batteries for strength and for proper battery polarity. Replace if weak or dead.

Problem: Flip Flop does not play music.

Action #1: Make sure the ON/OFF/VOLUME knob is turned ON and set at an audible level.

Action #2: Check the Batteries for strength and for proper battery polarity. Replace if weak or dead.

Problem: Flip Flop does not work at all.

Action: Check all Batteries for strength and for proper battery polarity. Replace if weak or dead.

Care of the Unit:

Flip Flop can be wiped clean with any household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Do not submerge the unit, as it will damage the electrical components.