
Go Go Hot Wheels #5052

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697
customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Start your engines!

Activate your capability switch to race your car on this roundabout racetrack. Exciting racetrack sound effects and the song “You’ve Got to Take a Chance” play in the background. Comes with two cars that can be placed on the track together. On/off volume control. Works with most Hot Wheels and Matchbox type cars. Size: 10½"W x 10½"L x 10½"H. Requires 4 C Batteries. Weight: 3½ lbs.

Operation:

1. Go Go Hot Wheels requires 4 C batteries. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable, heavy-duty or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. Gently turn the unit over to reveal 2 black battery compartments. Carefully remove the small screw from each of the battery compartment covers using a Phillips head screwdriver, and then slide the battery compartment covers off. Install C size batteries into each holder. When installing new batteries, always be careful to observe battery polarity. Replace battery covers and screws.
3. Next plug in your external capability switch into the female 1/8" jack, located in the side of the base. If your switch has a 1/4" male plug, then order one of our #1170 1/4" to 1/8" adapters. Make sure the male plug is pressed firmly into the female jack, there should be not gaps. Turn the Go Go Hot Wheels’s **ON/OFF/Volume** switch **On** and adjust the volume to a desired level. You can now activate Go Go Hot Wheels with your switch.
4. When you activate your switch race your car on this roundabout racetrack. Exciting racetrack sound effects and the song “You’ve Got to Take a Chance” play in the

background. When you release your switch the car and music will stop. A switch with a latch/timer or a switch modifier like our No. 605 can also be used for users who cannot sustain a switch.

5. We have included for your convenience two clamping areas on the front of the base for C-clamps or other similar type clamps used for table to or wheelchair try clamping.

Troubleshooting:

Problem: The Go Go Hot Wheels does not turn on when switch is depressed.

Action #1: Make sure that you plugged your switch connection all the way in. Any gaps may interrupt electrical connection. Make sure the **On/Off Volume** switch is turned **On**.

Action #2: Make sure batteries are fresh.

Action #3: Try a different switch with Go Go Hot Wheels to rule it out as the source of the problem.

Care of Unit:

Go Go Hot Wheels can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not submerge the unit in any fluids, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.