
Topsy Turvy #506

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Tons of fun!

Watch the colorful beads cascade through the turning clear plastic tube when you activate the attached switch or your own capability switch. Multicolored lights blink and six upbeat songs play. A mirror is mounted on the bottom for great visual effects. Vibration can be turned on or off. A perfect cause and effect experience which also increases visual attention. Size: 15"L x 10½"W x 9¼"H. Requires and 4 C and 4 AA Batteries. Weight: 4¼ lbs.

1. Topsy Turvy requires 4 C & 4 AA batteries (not included). Use Alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. The battery compartments are located on the bottom of the unit's base. To access the compartments remove the Phillips Head screws from each battery compartment. Install the AA and C size batteries into their appropriate holder. When installing new batteries, always be careful to observe battery polarity. Replace battery covers and screws. Never mix old and new batteries together or different brands or types together.
2. Turn the ON/OFF/VOLUME knob clockwise, you will hear an audible click. Adjust to knob for desired volume level of the music. There is also an ON/OFF Vibration toggle switch on the back of the unit. This will add vibration when the Topsy Turvy's switch is activated. Topsy Turvy can be used with or without the vibration function.

External Switch Use:

3. You can plug in any external capability switch into Topsy Turvy via the switch jack located on the side of the unit. Topsy Turvy has a standard 1/8" switch input jack. When plugging in your switch make sure it is plugged in all the way. There should be no gaps between the connections.
4. Simply activate the built in switch on the front of the unit, or your own external switch to watch the action of the colorful beads cascading through the motorized turning clear tube. Multi colored

lights blink, 1 of 6 upbeat songs play and a mirror is mounted to the bottom to give you a view of the exciting happenings.

Troubleshooting:

Problem: Topsy Turvy's lights, music or vibration do not work when the built in switch or external switch is activated.

Action #1: Make sure the ON/OFF/VOLUME knob is turned.

Action #2: Check the Batteries for strength and for proper battery polarity. Replace if weak or dead.

Problem: Topsy Turvy does not play music.

Action #1: Make sure the ON/OFF/VOLUME knob is turned ON and set at an audible level.

Action #2: Check the Batteries for strength and for proper battery polarity. Replace if weak or dead.

Problem: Topsy Turvy does not work at all.

Action: Check all Batteries for strength and for proper battery polarity. Replace if weak or dead.

Care of the Unit:

Topsy Turvy can be wiped clean with any household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Do not submerge the unit, as it will damage the electrical components.