
Five-Function Activity Center

Encourages exploration!

Our activity center is great for teaching cause and effect skills. Activate the bright yellow plate which activates an AM/FM radio (included), a large red plate which vibrates when pressed, a wooden roller sounds a buzzer, a pull ball turns on a music box, and a large orange plate turns on a bright light. Each of the switch plates has been designed to enhance sensory awareness, eye-hand coordination and language development. Size: 15"L x 11½"W x 4"H. Requires 2 C Batteries. Weight: 2½ lbs.

Operation:

1. The Five-Function Activity Center requires two C size batteries. The battery compartment is located under the unit, beside the radio. Remove the Velcro battery case cover by gently pulling on it, and install new batteries, being careful to observe battery polarity. Alkaline batteries are recommended because they last longer. Do not use rechargeable batteries because they supply lower voltage and the unit may not perform as well.

Troubleshooting:

Problem: The unit stops functioning.

Action: Replace batteries.

Care of Unit:

The Five-Function Activity Center/Busy Box can be wiped clean with any household multi-purpose cleaner and disinfectant.

Do not submerge the unit as it will damage the electrical components.

Do not use abrasive cleaners as they will scratch the surface of the unit.

**Five-Function Activity Center
#510**

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com