

---

## Finger Isolation Busy Box

---

Provides stimulation and enhances finger isolation!

To activate a response an individual has to purposefully press the recessed buttons with his or her finger. Upon activation, the five colorful buttons produce an assortment of stimulation including lights, vibration, music, and gentle breezes. Great for learning colors and for a tactile and auditory experience. Size: 14¼"L x 9½"W x 16¼"H. Requires 2 C Batteries. Weight: 2½ lbs.

### Operation:

1. The Finger Isolation Busy Box requires 2 "C" size batteries. Alkaline batteries are recommended because they last longer. Do not use rechargeable batteries because they supply lower voltage and the unit may not perform as well.
2. The battery compartment is located on the underside of the unit. The battery compartment cover is held on at Velcro attachment sites. Slide your fingers into the finger holes on the cover and gently pull upward to release the Velcro strip hold. Install fresh batteries according to proper battery polarity. Replace compartment cover.
3. Press any of the five embedded buttons with your fingers to be rewarded with a variety of sensory experiences. Stimulating responses include: music playing from a built in music box, air gently blowing from the fan, lights illuminating, a buzzer sounding and colorful sequins dancing about under a clear dome.

4. Each of the features will only remain activated as long as pressure is maintained on the corresponding button. Once you release the button, there will be a brief delay, and then the feature will turn off.

### Troubleshooting:

**Problem:** The unit fails to operate, or operates incorrectly.

**Action:** Replace both "C" batteries paying close attention to proper battery polarity.

**Problem:** One or more of the features is "weakening" or working inconsistently (i.e. music is muffled or distorted).

**Action:** Replace both "C" batteries paying close attention to proper battery polarity.

**Problem:** One button seems to be stuck / jammed.

**Action #1:** Gently clean the area around that particular button with a slightly damp cloth to see if it releases.

**Action #2:** Gently push the button inward a couple more times to see if that will release the jam. **DO NOT** jam the button in further.

### Care of Unit:

The Finger Isolation Busy Box can be wiped clean with any household multi-purpose cleaner or disinfectant. Use caution not to get cleaning fluid or any liquid inside of the button areas.

**Do not submerge** the unit, as it will damage the electrical components.

**Do not use abrasive cleaners,** as they will scratch the surface of the unit.

**Do not jam** the buttons in with force, as this may damage that component.

---

## Finger Isolation Busy Box #515

---

### USER'S GUIDE



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)