

---

---

## Wall Mounted Activity Center #556

---

---

### USER'S GUIDE



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697  
customer\_support@enablingdevices.com



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

## 9 Sources of fun and sensory stimulation!

Our fun-filled, wall-mounted activity center provides a wide array of features for somatosensory stimulation: a bright blue plate which vibrates when pressed; a wooden roller that turns on a music box and lights; a pull-ball which turns on a fan; a large, yellow plate which switches on a bright light; a bead chain curtain with an unbreakable plastic mirror; one push button which activates a buzzer; one push button which activates a fan, and a push button which activates a music box and lights. Mounting hardware included. *Size: 21½" x 18½" x 4". Requires 2 C Batteries. Weights: 4½ lbs.*

This activity center is designed to be mounted on a wall (hardware provided) at a convenient height for its intended users.

### Operation:

1. The Wall Mounted Activity Center requires two C size batteries. The battery compartment is located under the mirror, which is attached with Velcro. Remove the mirror by gently pulling on it to release the Velcro hold.
2. Next remove the small Phillips Head screw from the battery cover and slide cover off. Install new batteries, being careful to observe battery polarity. Alkaline batteries are recommended because they last longer. Do not use rechargeable batteries because they supply lower voltage and the unit may not perform as well. Set the ON/OFF switch on the battery case to ON.
3. Replace the cover, screw and mirror, pressing down firmly on the sides to secure it in place.
4. To operate an external toy with this unit connect a cord to an external toy or device via the 1/8-inch jack on the back of the unit. This unit comes with a 1/8- to 1/8-inch cord for activating external toys or devices with 1/8-inch jacks.

### Troubleshooting:

#### Note:

- 1) If this unit is **not** connected to an external toy or device, the universal must be removed from the jack or the unit will not operate properly.
- 2) If you need to use a 1/4- to 1/8-inch adaptor, it must be a mono adaptor, not stereo.

**Problem:** The unit stops functioning.

**Action:** Replace batteries.

#### Care of Unit:

The Wall Mounted Activity Center can be wiped clean with any household multi-purpose cleaner and disinfectant.

**Do not submerge** the unit, as it will damage the electrical components.

**Do not use abrasive cleaners**, as they will scratch the surface of the unit.