
CD Boom Box Control Center #5943

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Easy controls!

A fantastic tabletop CD Boom Box player is now available for all users including the visually impaired, blind and people who have limited mobility. We've adapted the Control Center with seven 2½" switches for easy access. The switches control on/off, volume, forward and backward, play and pause, and stop. All seven switches work for the CD function. On/off and volume control buttons work for the radio and tape functions. Forward and backward buttons work with the radio if you program preset radio stations. Center also has a jack for your headphones or ear buds. *Size: 17"L x 11"W x 6"H. Requires 6 C Batteries. Weight: 7 lbs.*

Operation:

1. The CD Control Center requires 6 C batteries (Not included). Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. **Battery installation:** Locate the battery compartment on the bottom of the unit. Slide the battery cover off. Install 6 new "C" batteries. Replace cover.
3. **CD Control:** This CD Control Center has been adapted with large activation switches for easy access to the CD players controls. The user can be in command of the tracks forward and backwards of his chosen album, control of the volume up and down, play/pause, off and stop.
4. **Radio Control:** The radio control is different than controlling the CD portion. Using the radio sector button, choose either AM or FM band. The big power ON/OFF button will turn the Radio ON or OFF with each switch activation. The Volume controls will work normally + or - volume level. If you program preset radio stations into the boom box (**Please reference the included original**

Sony instruction guide for programing and additional

features) using the big Track Forward or Track Back buttons will let the user move through their preset stations. **Please Note:** Play/Pause and Stop buttons will have no function for controlling the Radio and Tape portion of the boom box.

5. **Tape Control:** Press the "TAPE" button. Next press the STOP/EJECT button to open the cassette tape compartment. Insert your audio tape with the open edge facing up and the side you want to play facing you. Push the cassette door to close it. Manually push the button marked "PLAY". To Stop or Start your tape press the Power/ON/OFF button. Volume control will also work from the big buttons. Track Forward, Track Back and Stop will not function in the TAPE mode.

Troubleshooting:

Problem: The CD Control Center does not work.

Action #1: Check all connections, and ON/OFF switches

Action #2: Make sure you have removed the cardboard insert from inside the CD tray.

Action #3: Make sure that there is nothing inhibiting the depression of the control switches or holding any of the control switches down.

Care & Maintenance:

1. Keep the CD Control Center clean by wiping it with a slightly damp cloth when needed.
2. Keep the CD Control Center out of direct sunlight and away from any direct heat source.
3. Do not drop the CD Control Center on a hard surface and do not expose it to moisture or immerse it in water.