

---

---

## **Chin Switch #6001**

---

---

### **USER'S GUIDE**



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

[www.enablingdevices.com](http://www.enablingdevices.com)

### ***Light touch activation!***

This innovative Chin Switch is worn around the neck for convenient hands-free access. Activate this light touch switch by simply moving your chin. Plastic tubing holder is easily adjustable. Switch size: 2½"W x 2½"L. Weight: ½ lb.

#### **Operation:**

1. Slip the Chin Switch clear tubing over your head and adjust the slider on the clear tubing up or down so that the Chin Switch rests at the proper position under your Chin for ease of activation.
2. Plug the Chin Switch into the jack on your switch-adapted toy/device.
3. If it is necessary for you to use an adapter, make sure that you use a MONO adapter, not a STEREO adapter.
4. Make sure that the connection between the Chin Switch is plugged in all the way. There should be no gaps.
5. Simply press anywhere on the Chin Switch to activate your toy/device.
6. The toy/device will only remain activated while the Chin Switch continues to be actuated. Once you release the switch, the toy/device will turn off.

#### **Troubleshooting:**

**Problem:** The Chin Switch does not activate your toy/device.

**Action #1:** Make sure that the connection between the Chin Switch and your toy/device is tight. There should be *no* gaps. This is a common error and an easy fix.

**Action #2:** Try a different switch with your toy/device to rule out the toy/device as the source of the problem.

**Action #3:** Try a different adapter (if applicable) to rule this out as the source of the problem.

#### **Care of Unit:**

The Chin Switch can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not submerge** the unit, as it will damage the contents and the electrical components.

**Do not use abrasive cleaners**, as they will scratch the surface of the unit.