
Rainforest Waterfall #626

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697
customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

A great tabletop toy!

Activate your capability switch and colorful lights slowly turn on and off while rainforest pals play peek-a-boo and move about in the leaves. Great for increasing visual attention and tracking. It can play lullabies or simple rainforest sounds. Toy comes with a removable base that can be clamped to a tabletop. Not to be used as a crib toy. Size: 9½"D x 3"W. Requires Capability Switch and 4 C Batteries. Weight: 3½ lbs.

Operation:

1. Rainforest Waterfall requires 4 C batteries (Not included). Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly.
2. To install the batteries, carefully turn the unit over to reveal the battery compartment. If removable stand is attached you will need to remove it to access the battery compartment. The stand is held in place with Velcro, just pull the stand off. Stand can also be clamped for table top or lap tray use. Remove the battery cover screws and cover, next install four C batteries into the compartment. Please note to follow proper (+) & (-) battery polarity. Replace cover and screws.
3. The Rainforest Waterfall can be used with or without the used of an external capability switch (sold separately). Please refer to the included original manufacture's instructions for this items features and functions. **Please Note:** When using the Rainforest Waterfall with a capability switch, activating your switch once will turn the Rainforest Waterfall ON a second switch activation will turn it OFF. The functions controlled will vary depending on the selected settings.

Switch Use:

4. Plug your external capability switch (Not Included) into the female 1/8" cord jack. Press your switch and it will activate the Rainforest Waterfall as indicated in operation No.2.

Troubleshooting:

Problem: Rainforest Waterfall does not turn on when switch is activated.

Action #1: Make sure the ON/OFF switch is set to ON.

Action #2: Make sure that you press all connections firmly together. Any gaps may interrupt electrical connection.

Action #3: Make sure batteries are fresh.

Action #4: Try a different switch with Rainforest Waterfall to rule it out as the source of the problem.

Care of Unit:

The Rainforest Waterfall can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.