

---

---

## Adapted Gearations #6268

---

---

### USER'S GUIDE



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

Eleven interlocking gears spin, flip and mesmerize when you activate your switch. Hundreds of gear combinations will encourage creativity and develop fine motor skills. 2 speeds. Size: 15"L x 14½"W x 3"H. Requires 1 C Battery. Weight: 2 lbs.

#### Operation:

1. Gearations requires one C battery (Not included). **Please Note:** Alkaline batteries are recommended (e.g. Duracell or Energizer brand) rechargeable or heavy duty batteries will not work as well with this device.
2. The battery compartment is located under the unit. Turn the unit over and remove the battery cover screw by turning it counterclockwise with a Phillips head screwdriver. Install battery, being careful to observe proper battery polarity.
3. Replace the battery case cover and secure with the screw. Do not over-tighten.
4. Set the **ON/OFF/DIRECTION** switch to the direction you want the gears to turn, Clockwise or Counter Clockwise. There are also two speed settings for the turning of the gears. Set this as well. When finished playing set the **ON/OFF/DIRECTION** switch to **OFF** to prevent battery drain.
5. To use with a switch, plug any capability switch into the 1/8" jack located on the front underside of the Gearations. Make sure that you have your switch plugged in all the way. There should be no gaps. Activating your switch will start the gears turning, once you release the switch the gears will stop. If continuous play is desired by means of a switch you can use any switch or switch modifier like our No.605 with a Latch & Timer with Magnetic Gears.
6. Place any number of gears on Gearations board. At least one gear needs to be placed on the center gear hub for all to turn.

7. Gearations can be used with or without the use of an external capability switch. Turning the **ON/OFF/DIRECTION** switch to either direction will start the gears turning.

#### Troubleshooting:

If the unit fails to operate or operates incorrectly, the following steps should be performed:

**Action #1:** Make sure there are no obstacles between the gears and the base.

**Action #2:** Check battery for freshness, if weak or dead replace with new batteries. Use an alkaline battery (E.G. Duracell or Energizer brand). Do not use rechargeable or heavy duty batteries.

**Action #3:** Make sure that you have your switch plugged in all the way. There should be no gaps.

**Action #4:** Try your external capability switches with another toy/device to rule out the switches as the source of the problem.

#### Care of Unit:

Gearations can be wiped clean with any mild household multi-purpose cleaner and disinfectant.

**Do not submerge** the unit, as it will damage the contents and the electrical components.

**Do not use abrasive cleaners**, as they will scratch the surface of the unit.