

### ***Light touch activation!***

When touched, the bead chain box provides instant feedback - music, lights and vibration. It's a great therapeutic device that also improves auditory, visual and tactile awareness. Size: 14<sup>3</sup>/<sub>4</sub>"L x 11<sup>1</sup>/<sub>4</sub>"W. Requires 6 AA Batteries. Weight: 2<sup>3</sup>/<sub>4</sub> lbs.

#### **Operation:**

1. The Bead Chain in a Box requires 6 AA batteries to operate. Alkaline batteries are recommended because they last longer. Do not use rechargeable batteries because they supply lower voltage and the unit may not perform as well.
2. The battery compartment is located on the bottom of the unit. Each of the three separate compartments is secured with a small screw as a safety precaution. Use a Philips head screwdriver to remove the small screws and slide the battery compartment covers off. Install the 6 AA batteries paying careful attention to proper battery polarity.
3. Replace the battery compartment covers and re-secure the screws.
4. You can lay the Bead Chain in a Box flat on a lapboard or tabletop, or you can prop it up if you choose.
5. Turn the unit on by flipping the toggle switch, found on the outside perimeter of the box, into the "ON" position.
6. When you manipulate the beads in any way, you will be rewarded with music, lights and vibration!

7. Once you stop moving the beads, there will be a brief delay, and then the features will stop.
8. Once you are done playing with the unit, flip the toggle switch into the "OFF" position, in order to prolong battery life.

#### **Troubleshooting:**

**Problem:** The unit does not operate, or operates incorrectly

**Action:** Check all batteries for freshness and proper polarity.

**Problem:** One or more of the features is not operating, while other features are operating.

**Action:** All of the battery compartments are wired together. Each separate battery compartment does not control separate features. Therefore, when one or more features does not seem to be operating correctly, it is important to check ALL of the batteries for freshness and proper polarity. Replace any weak/dead batteries paying close attention to proper polarity.

#### **Care of Unit:**

The Bead Chain in a Box can be wiped clean with any household multi-purpose cleaner and disinfectant. Try your best to avoid getting the cleaning agent behind the mirror plate.

**Do not submerge** the unit, as it will damage the electrical components.

**Do not use abrasive cleaners**, as they will scratch the surface of the unit.

---

---

## **Bead Chain in A Box #644**

---

---

### **USER'S GUIDE**



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)