

---

---

**Multi-colored Bead Chain with  
Lights and Music  
#646 Mini & #647**

---

---

**USER'S GUIDE**



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

[www.enablingdevices.com](http://www.enablingdevices.com)

### **Ergonomic design!**

Our popular bead chains have a unique design for users who can reach through to the base. When a hand passes over the light sensor, a red light blinks and music plays. This provides wonderful visual auditory and tactile experiences. A mini version stands 6" tall and the other 12" tall. Requires 4 AA Batteries. Weight: 2½ lbs.

### **Operation:**

1. The Multi-colored Bead Chain with lights and music requires 4 AA batteries to operate. Alkaline batteries are recommended because they last longer. Do not use rechargeable batteries because they supply lower voltage and the unit may not perform as well.
2. The battery compartments are located on the bottom of the unit. Both of the two separate compartments are secured with a small screw as a safety precaution. Use a Philips head screwdriver to remove the small screws and slide the battery compartment covers off. Install the 4 AA batteries paying careful attention to proper battery polarity. Replace the battery compartment covers and re-secure the screws.
3. Flip the small toggle switch, located next to the battery compartment, into the ON position.
4. Secure the bead chain on your tabletop, lapboard, etc. with the suction cups or whatever clamping equipment you are using. The suction cups should be to the back of the unit.
5. Now, when you manipulate the beads with your hands (or other body part), you will be rewarded with lights and music. There are two lights under the beads and two lights in front of the beads.
6. When you remove your hand, there will be a delay of approximately 5 seconds and then the lights and music will turn off.
7. When you are done playing with the unit, flip the toggle switch into the OFF position to prolong battery life.

### **Troubleshooting:**

**Problem:** The unit does not operate, or operates incorrectly.

**Action #1:** Check all batteries for freshness and proper polarity.

**Action #2:** Make sure that you are in a room with normal or bright light. Overhead light is best. Dim lighting will cause the unit to act erratically. The unit will not work at all in dark rooms.

**Action #3:** The center "light," on the front of the unit, which is clear instead of red like the others, is actually the sensor for this unit. Make sure that there is movement being performed over the front of this unit (with your hand, foot, etc.).

**Action #4:** If you have your hand over the sensor area, but you are not moving, there will be a brief delay and then the lights and music will turn off. You need to maintain movement over the front of the unit in order to keep the lights and music activated.

### **Care of Unit:**

The Multi-colored Bead Chain with lights and music can be wiped clean with any household multi-purpose cleaner and disinfectant. If the bead chains become dull over time, they can be wiped clean with WD-40. Care must be taken, however, to remove all residue of the oil with a multi-purpose cleaner or disinfectant.

**Do not submerge** the unit, as it will damage the electrical components.

**Do not use abrasive cleaners**, as they will scratch the surface of the unit.