



Fig. 1



Fig. 2

enabling
devices

For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com

Interchangeable Roller #694

USER'S GUIDE

enabling
devices

50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Five different textures!

Our innovative textured rollers provide hours of sensory awareness. Comes with five colorful textured rollers: large and small bead chains, two different rope textures and a soft ribbed texture. Rollers can be easily changed with the slip-in slip-out pin. The base has three yellow blinking locator lights that invite the user to give the roller a spin. When you give it a spin you can watch your hand in the mirror on the base and be rewarded with multi-colored blinking lights, music and adjustable vibration. Great for encouraging reaching, swiping and grasping. Size: 15"L x 6½"W x 4½"H. Requires 4 AA Batteries. Base and Rollers Total Weight: 4½ lbs.

1. Interchangeable Roller requires 4 AA batteries (not included). Use Alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. There are two battery compartments located on the bottom of the unit. Remove the Phillips Head screws from each compartment and remove the covers. Install the 4 AA batteries. When installing new batteries, always be careful to observe battery polarity. Replace battery covers and screws. Never mix old and new batteries together or different brands or types together.
2. **Roller Changing:**
To install or change one of the rollers on the unit you must first remove the locking pin. The locking pin is located on the upper right-hand side of the base and secured to the base by a small chain. Simply pull the pin out by the knob (see Fig. 1). Next lift the roller up from the side the pin was removed. Place the new roller into the base starting from the side opposite of the pin (see Fig. 2). Once the pin is lying horizontally lock it in place by replacing the locking pin.
3. Turn the ON/OFF/VOLUME knob clockwise, you will hear an audible click. Adjust to knob for desired volume level of the music. There is an ON/OFF toggle switch which controls the 3 yellow locator lights on the base of the unit. When turned on the 3

lights will flash rapidly. The main ON/OFF/VOLUME knob will turn also shut these lights OFF.

4. Simply rotate the roller and you will be rewarded with multi-colored blinking lights, music. The roller base also vibrates. The music, lights and vibration will play between 5 to 8 seconds with each rotation of the roller. Vibration can be adjusted or turned off.
Please Note: When adjusting vibration the adjustment will start when the adjustment knob is turned half way. There will be no effect before the halfway point.

Troubleshooting:

Problem: Interchangeable Roller's lights or vibration do not work when the roller is spun.

Action #1: Make sure the Lights and Vibration ON/OFF toggle switch is turned ON.

Action #2: Check the Batteries for strength and for proper battery polarity. Replace if weak or dead.

Problem: Interchangeable Roller does not play music.

Action #1: Make sure the ON/OFF/VOLUME knob is turned ON and set at an audible level.

Action #2: Check the Batteries for strength and for proper battery polarity. Replace if weak or dead.

Problem: Interchangeable Roller does not work at all.

Action: Check all Batteries for strength and for proper battery polarity. Replace if weak or dead.

Care of the Unit:

Interchangeable Roller can be wiped clean with any household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Do not submerge the unit, as it will damage the electrical components.