

---

---

## **Cyclone #7008**

---

---

## **USER'S GUIDE**



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

[www.enablingdevices.com](http://www.enablingdevices.com)

*Watch and listen!*

Activate the attached capability switch or add your own and watch the cyclone whip around colored glitter shapes in the cylinder while you listen to the wonderful sounds of wind, rain, thunder and upbeat music. Great for increasing visual attention. Has an external jack for your capability switch and an on/off switch for volume control. Size: 13"H x 11"W x 11"D. Requires 6 C Batteries. Weight: 2½ lbs.

**Operation:**

1. The Cyclone requires 6 C batteries to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. Carefully turn over unit to reveal battery compartment. Remove the screws from the battery compartment covers. Next lift the battery compartment covers off and insert 6 "C" batteries into the holders. Alkaline batteries are recommended because they last longer. Do not use rechargeable batteries because they supply a lower voltage and unit may not perform as well. Be careful to check for Polarity, matching + pole to + marking and - pole to - marking in the battery holder. Replace the covers and screws.
3. Turn the ON/OFF/Volume switch to ON by turning it clockwise. Set it to an audible volume level. Press the textured green switch plate and you will be rewarded with illuminated swirling confetti, cyclone sounds and music...Once you release pressure on the textured switch, the confetti, light, sounds and music will stop.
4. To use the Cyclone with an external switch, plug your switch into the 1/8" female jack located on the back of the unit. When your switch is activated the Cyclone will activate as before. Release your switch and the Cyclone will stop.

**Please Note:**

**Do not block air flow from the fan via the top or bottom of the Cyclone's tower.**

5. When you are finished using the Cyclone turn the unit OFF. This will prevent battery drain. If the Cyclone is not going to be used for a long period of time, e.g. one month or longer, we recommend removing the batteries during storage to prevent battery drain or leakage, which can cause damage to the unit.

**Troubleshooting:**

**Problem:** Cyclone does not work.

**Action #1:** Check the batteries for proper installation, as noted in operation No. 2.

**Action #2:** Check batteries for freshness, if weak or dead replace with new batteries.

**Action #3:** Make sure there is nothing obstructing textured switch plate, fan blades or air flow to the fan.

**Action #4:** Check your switch with another device to rule the Cyclone out as the source of the problem.

**Care of Unit:**

The Cyclone can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not submerge** the unit, as it will damage the contents and the electrical components.

**Do not use abrasive cleaners**, as they will scratch the surface of the unit.