
Music Box #702

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697
customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Play four lively tunes!

Four tune music box. Plug your switches into this bright box and hear unique melodies while lights flash. Each switch plays a different tune. A great teaching device which helps to increase auditory and listening skills. Size: 5"L x 5"W x 5"H. Requires up to 4 Capability Switches and 4 AA Batteries. Weight: ½ lb.

Operation:

1. The Music Box requires 4 AA batteries (Not included Alkaline batteries must be used (e.g. Duracell or Energizer Brands). Do not use rechargeable batteries because they supply a lower voltage and the unit may not perform as well. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located under the unit. Carefully turn the unit over. Remove the battery covers screw by turning it counterclockwise with a Phillips head screwdriver. Install batteries, being careful to observe proper battery polarity.
3. Replace the battery case cover and secure with the screw. Do not over-tighten.
4. Plug in up to four capability switches into their corresponding 1/8" jack to hear one of four well-known children's musical tunes accompanied by flashing lights. The music will only play during switch activation.
5. Make sure that you have TIGHT connections between your switches and Music Box. There should be no gaps.

Troubleshooting:

Problem: There is no music (or it becomes slow or distorted), or the unit does not activate properly.

Action#1: Rotate (spin) the batteries within the battery compartment to ensure a good connection.

Action #2: Replace batteries paying close attention to proper battery polarity.

Action#3: Check to make sure you have tight connections between plugs and jacks. There should be NO gaps.

Action#4: Try the Music Box with another external capability switch to rule it out as the source of the problem.

Care of Unit:

The Music Box can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not submerge the unit, as this could damage the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.