
Dome Alone with Built-In Switch #71

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697
customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Delights individuals!

Everyone just loves to watch the bright, confetti-like objects dance around in our best-selling dome toy. A splendid tempest of music, color and light. Encourages listening skills and increases visual attention. Appropriate for all ages. The Dome Alone with Built-in Switch has a large button switch on top of the dome to encourage reaching. Can also be used with any capability switch. Size: 11"L x 10"W x 6"H. Requires 4 C Batteries. Weight: 2½ lbs.

Operation:

1. The Dome Alone with switch requires four C size batteries Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartments are located on the bottom of the unit. To remove the battery compartment covers, unscrew the small Phillips Head screws, and then slide the covers off. Install new batteries, being careful to observe proper (+) & (-) battery polarity. Replace covers and screws. Turn the On/Off/Volume knob to On (clockwise).
3. Activate the Dome Alone with switch by depressing the large button on top of the dome, or connect the unit to any external capability switch via the jack, located on the side of the unit. Dome Alone with Switch is equipped with a 1/8-inch jack, for use with capability switches with a 1/8-inch plug. If you need to use a 1/4- to 1/8-inch adapter, it must be a mono adapter, like our #1160, not stereo.
4. If you are using an external capability switch, make sure that the connections between the external capability switch and the adapter (if applicable) and the jack on the Dome Alone with switch are plugged in all the way. There should be no gaps.

5. Begin play by either activating the large button on top of the dome or by activating the external capability switch.
6. The Dome Alone with Switch will continue playing while the button continues to be held or while the external capability switch continues to be activated. Once you release, the Dome Alone with Switch will stop.

Troubleshooting:

Problem: The pom poms do not move.

Action #1: Try shaking the unit gently in order to free the propellers.

Action #2: Replace the batteries on the left side paying close attention to proper polarity.

Problem: The music does not play or light up.

Action #1: Replace the batteries on the right side paying close attention to proper polarity.

Care of Unit:

The Dome Alone with switch can be wiped clean with any household multi-purpose cleaner and disinfectant.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.