
The Tumbler #75

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Have a ball with our Tumbler!

Pressing the large red button on the front of this device sends the balls tumbling around while music plays, lights shine and the unit vibrates. Provides auditory, visual and tactile stimulation. Can also be activated with an external capability switch (not included). Size: 10½"D x 13½"H. Requires 4 C Batteries. Weight: 3 lbs.

OPERATION:

1. The Tumbler requires four "C" size batteries. Alkaline batteries (i.e. Duracell) are recommended because they last longer. Do not use rechargeable batteries because they supply lower voltage and the unit may not perform as well.
2. The battery compartment is located on the underside of the unit. To access the compartment, simply remove the Velcro battery cover. Install the batteries paying careful attention to proper polarity. Replace the battery cover.
3. To activate the toy, simply press the big red button on the front of the device.
4. Enjoy the effects as the balls tumble all around accompanied by music, light and vibration. The toy will stop once you release pressure on the big red button.
5. You can also activate this toy with your own external capability switch. Simply plug your switch into the jack on the side of the toy. The Tumbler accepts 1/8" plugs. Make sure that the connection between the jack and the plug is tight/secure. There should be no gaps.
6. Again, the toy will stop once you release pressure on your external capability switch.

TROUBLESHOOTING:

- There are two sets of two batteries. One set controls the music and light and the other set controls the tumbling of the balls and vibration.

Problem: The music and/or the light is not functioning as it should.

Action: One or both of the batteries that control the music and light is weak, dead or installed incorrectly. Check these two batteries and replace them if need be, paying close attention to proper battery polarity.

Problem: The balls are not tumbling and there is no vibration.

Action: One or both of the batteries that control the tumbling and vibration is weak, dead or installed incorrectly. Check these two batteries and replace them if need be, paying close attention to proper battery polarity.

Problem: You see a lot of dust or white particles collecting under the dome.

Action: Using a screwdriver, remove the two screws from the side of the dome and lift the dome off. Clean out the compartment and the underside of the dome using a wet cloth and a mild household cleaner. Dry the compartment completely. Use caution not to interfere with the mechanisms within the compartment. Replace the dome and the screws.

Problem: The toy does not turn off. It is running constantly.

Action: Make sure that you do not have an adapter plugged into the jack on the side of the unit alone (if applicable). When using the toy with an external capability switch, make sure that the connection between the switch and toy is tight. There should be NO GAPS. If you are not using an external switch, make sure that there is nothing near the toy which may be pushing into the red button, therefore holding it in an "On" position.

CARE OF THE UNIT:

The Tumbler can be wiped clean with any household multi-purpose cleaner and disinfectant.

* DO NOT USE ANY OTHER BALLS IN THIS TOY OTHER THAN THE BALLS PROVIDED. IF YOU USE OTHER BALLS, YOU WILL DAMAGE THE UNIT AND YOUR WARRANTY WILL BE VOIDED.

* Do not submerge the unit, as this will damage the contents and the electrical components.

* Do not use abrasive cleaners, as they will scratch the surface of the unit.