

---

---

## Mini Popper #751

---

---

### USER'S GUIDE



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697  
[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

### **Absolutely delightful!**

Press anywhere from the rim to the top of the Mini Popper and enjoy music, bouncing balls, vibration, and lights. A great item for increasing visual attention, tactile awareness and auditory development. Or activate it with your favorite switch (not included). Size: 8"D x 4"H. Requires 2 AA Batteries. Weight: 1 lb.

#### **Operation:**

1. The Mini Popper requires two AA batteries (Not included). Alkaline batteries are recommended because they last longer. Do not use rechargeable batteries because they supply lower voltage and the unit may not perform as well.
2. The battery compartment is located on the bottom of the unit. To remove the battery compartment cover, unscrew the small Phillips Head screw, then slide the cover off. Install new batteries, being careful to observe proper (+) & (-) battery polarity. Replace cover and screw.
3. Activate this toy by depressing the on top or base of the Mini Popper, or connect the unit to any external capability switch via the 1/8" jack, located on the side of the unit. If you need to use a 1/4 " to 1/8" adapter for your switch, it must be a mono adapter, not stereo.
4. If you are using an external capability switch, make sure that the connections between the external capability switch and the adapter (if applicable) and the jack on the Mini Popper are tight. There should be no gaps.
5. Begin play by either pressing down on top or base of the dome or by activating the external capability switch. This will send the balls tumbling around while simultaneously playing music and lighting up the four surrounding LED lights.
6. The Mini Popper will continue playing while the dome continues to be held or while the external capability switch continues to be activated. Once you release, the Dome will stop.

#### **Troubleshooting:**

**Problem:** The Mini Popper does not work.

**Action #1:** Check or replace the two AA batteries with fresh new batteries.

**Action #2:** Make sure the Mini Popper is on a flat level surface and that nothing is restricting any of the four red switch feet on the bottom of the unit.

**Action #3:** Try a different switch that you know works with other toys/devices to rule out the Mini Popper as the source of the problem.

#### **Care of Unit:**

The Mini Popper can be wiped clean with any household multi-purpose cleaner and disinfectant.

**Do not submerge** the unit, as it will damage the contents and the electrical components.

**Do not use abrasive cleaners**, as they will scratch the surface of the unit.