
Spin & Giggle Puppy #7570

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697
customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Wobbling, bobbling fun!

Activate your capability switches and get the puppy bowl wobbling and the balls spinning. Each additional activation lets your child discover colors, shapes and letters while cheerful music plays. We've added a clear dome to keep the balls inside the bowl. Size: 9"L x 9"W x 6½"H. Requires 3 AA Batteries. Weight: 1½ lbs.

Operation:

1. Spin & Giggle Puppy requires 3 AA Batteries to operate. Use alkaline batteries only. Do not use heavy duty or rechargeable batteries because they supply a lower voltage and the unit may not perform as well. Never mix old and new batteries together or different brands or types together.
2. To install the batteries turn the toy over and locate the screws on the battery cover door. Using a Phillips head screwdriver open the compartment and install 3 AA batteries paying close attention to proper battery polarity. Replace the battery compartment cover and secure with the screws.
3. Set the High/Low/Off volume switch to the desired level. Next connect to any, one or two external capability switches (not included) via the cord jacks located on the base of Spin & Giggle Puppy. Spin & Giggle Puppy is equipped with two 1/8" female mono jacks for use with external capability switches that have a 1/8" mono plug. Make sure your connections are plugged in all the way. There should be no gaps.
4. Activate your capability switches and get the puppy bowl wobbling and the balls spinning. Each additional activation lets your child discover colors, shapes and letters while cheerful music plays. We've added a clear dome to keep the balls inside the bowl. Spin & Giggle Puppy also works by pressing either the musical notes button or the ABC button on the puppy's feet.

Troubleshooting:

Problem: Spin & Giggle Puppy does not function correctly.

Action #1: Replace the batteries paying close attention to proper battery polarity.

Action #2: Make sure that the connection between the external capability switch or switches and the jacks are plugged in all the way. There should be NO gaps.

Action #3: Try your switch with another switch operated device in an effort to rule out your switch as the source of the problem.

Care of Unit:

If you will not be using Spin & Giggle Puppy for an extended amount of time, we recommend removing the batteries.

Spin & Giggle Puppy can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Do not submerge the unit, as it will damage the electrical components.