
The Twinkler #76

User's Guide



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

customer_support@enablingdevices.com



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

www.enablingdevices.com

Sparkles fly!

Pressing the yellow textured switch on the front of the device will send the sparkles flying around the dome while simultaneously playing music and lighting up. A fun and wonderful way to provide visual and tactile awareness. It can also be activated with an external capability switch (not included). Size: 13½"L x 10½"W. Requires 6 C Batteries. Weight: 3 lbs.

OPERATION:

1. The Twinkler requires six "C" size batteries. Alkaline batteries (i.e. Duracell) are recommended because they last longer. Do not use rechargeable batteries because they supply lower voltage and the unit may not perform as well.
2. The battery compartment is located on the underside of the unit. To access the compartment, simply remove the Velcro battery cover. Install the batteries paying careful attention to proper polarity. Replace the battery cover.
3. To activate the toy, simply press the textured yellow switch on the front of the device.
4. Enjoy the effects as the sequins flutter all about accompanied by music, light and vibration.
5. The toy will stop once you release pressure on the textured yellow switch.
6. You can also activate this toy with your own external capability switch. Simply plug your switch into the jack on the side of the toy. The Twinkler accepts 1/8" plugs. Make sure that the connection between the jack and the plug is tight/secure. There should be no gaps.
7. Again, the toy will stop once you release pressure on your external capability switch.

TROUBLESHOOTING:

- There are three sets of two batteries. The two sets on the left and middle (when you have the yellow plate switch facing you

and turn the unit up) controls the music and lights, and the other set (right) control the fluttering of the sequins and the vibration.

Problem: The music and/or the lights are not functioning, as they should.

Action: One or both of the batteries that control the music and light is weak, dead or installed incorrectly. Check these two batteries and replace them if need be, paying close attention to proper battery polarity.

Problem: The sequins are not fluttering and/or there is no vibration.

Action: One or more of the batteries that controls the sequins and vibration is weak, dead or installed incorrectly. Check these four batteries and replace them if need be, paying close attention to proper battery polarity.

Problem: The toy does not turn off. It is running constantly.

Action: Make sure that you do not have an adapter plugged into the jack on the side of the unit alone (if applicable). When using the toy with an external capability switch, make sure that the connection between the switch and toy is tight. There should be NO GAPS. If you are not using an external switch, make sure that there is nothing near the toy which may be pushing into the yellow button, therefore holding it in an "On" position.

CARE OF THE UNIT:

The Twinkler can be wiped clean with any household multi-purpose cleaner and disinfectant.

- **Do not submerge** the unit, as this will damage the contents and the electrical components.
- **Do not use abrasive cleaners**, as they will scratch the surface of the unit.