
Kaleido-Dome with Shapes

Encourages group participation!

Perfect for encouraging the user to become actively involved, this fun therapeutic item enhances matching, grasping and releasing skills. As you fit a shape on the base, a light is activated. When all twelve shapes are in place, the large center dome lights up, music plays and pom poms dance. A great source for continual visual, auditory and tactile stimulation. Size: 16" Diameter. Requires 6 C Batteries. Weight: 4¼ lbs.

Operation:

1. The Kaleido-Dome with Shapes requires six 1.5-volt C size batteries. Alkaline batteries are recommended because they last longer. Do not use rechargeable batteries because they supply lower voltage and the unit may not perform as well.
2. The battery compartment is located under the Kaleido-Dome with Shapes. To remove the battery compartment cover, gently pull on the cover to release the Velcro strip hold. Install new batteries, being careful to observe battery polarity.
3. Replace the battery compartment cover. Press down on the ends of the battery case cover to secure the Velcro strips.

4. Turn unit on by moving the toggle switch, located on the back of the unit, to the "ON" position. Turn unit "OFF" when not in use.

Troubleshooting:

Problem: The music, spinners and lights become slow, dim, or distorted, or they do not work at all.

Action: Replace all batteries with new alkaline batteries.

Care of Unit:

The Kaleido-Dome with Shapes can be wiped clean with any household multi-purpose cleaner and disinfectant.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Kaleido-Dome with Shapes #778

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697
Customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com