



Jumbo Switch with Latch/Timer #792

USER'S GUIDE

enabling
devices

For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697
customer_support@enablingdevices.com

enabling
devices

50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Now with intention!

We've added an intention adjustment to our popular latch timer Jumbo Switch. Great for those with uncontrolled movements or tremors. This feature requires the user to hold the switch for a specific amount of time (1-15 seconds) before the device is triggered. Once the intention time is set, you can select momentary, latch or timed output (0-120 seconds). Mounting plate is removable. Includes two free clear covers for placing your icons: one with a lip and one without. Size: 5"D x ½"H. Requires 1 9-Volt Battery. Weight: 1 lb.

Operation:

1. Carefully turn over unit to reveal the setting controls and battery holder. Remove the Phillips Head screw from the battery compartment cover. Next Observing polarity insert one 9-Volt battery into the holder. Alkaline batteries must be used only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly.
2. Turn the power on by sliding the **ON/OFF** control button located on the bottom of the unit to the **ON** position.
3. The **Mom/Time/Latch** button is located next to the **ON/OFF** button on the side of the unit. Select the mode by sliding the button to the desired mode.
4. Plug the cord connected to the Jumbo Switch into the switch input jack of the toy/device you wish to operate.

Available Modes:

Momentary:

In this mode, the unit operates as a momentary switch. The toy or device stays on as long as the Jumbo switch is activated. One you release the switch the toy or device will turn off.

Timed:

In this Mode, the unit operates as a timed switch. The toy or device will run for a set amount of time (1-120 seconds) when the Jumbo Switch is activated.

Latch:

In this mode, the Jumbo Switch operates as an On/Off Switch. The toy or device turns On with the first activation is made and stays On until a second activation is made. This will turn the toy or device off.

Using the Jumbo Switch (Intention Mode):

Intention Mode: allows the user to activate the device as in the Standard Mode above only *after pressing* the switch for a preset amount of time. The intention time can be adjusted from a fraction of a second to 15 seconds. The time is adjusted by rotating the small knob on the side of the unit. Note that this knob is the same knob used to adjust time when the Jumbo Switch is set for Time function. Therefore, if you will use the Jumbo Switch Time function when in Intention Mode, you must *first* set the time in Standard Mode *before* switching to Intention Mode. The Jumbo Switch will "remember" the time setting indefinitely until the Time is readjusted in Standard Mode.

Switching to Intention Mode:

1. Connect the Jumbo Switch and device as detailed above. Make sure the Jumbo Switch is off for approximately 10 seconds. Failure to wait 10 seconds may prevent the Jumbo Switch from switching in and out of Standard and Intention Mode.
2. Press the Jumbo Switch *before* turning it ON and keep it pressed. Then, turn ON Jumbo Switch. Continue to keep the Jumbo Switch pressed for 5 seconds. The Jumbo Switch should now be in Intention Mode.
3. Set the Time/Momentary/Latch Switch to the function you wish to use.
4. Adjust the knob to adjust Intention Time. This is the amount of time needed for the capability switch to be constantly pushed before the device will activate. Rotating the knob fully clockwise will allow the device to activate immediately, while full counterclockwise will take a full 15 seconds before the device will activate. The Momentary/Latch/Time functions are as outlined in the Standard Mode instructions above.

Mounting Plate Options:

The Jumbo Switch has a removable mounting base option. To use without the base, simply remove the two small Phillips Head screws holding the base from sides of the switch body. Included are a set of 9 self-adhesive Non-Skid feet. When using the Jumbo Switch without the base only 3 feet are needed. (See Photo for proper placement). If using with the base all 9 feet are needed. (See Photo).

Troubleshooting:

Problem: The Jumbo Switch does not activate your toy/device.

Action #1: Make sure that the connection between the Jumbo Switch and your toy/device is tight. There should be *no* gaps. This is a common error and an easy fix.

Action #2: Try a different switch with your toy/device to rule out the toy/device as the source of the problem.

Action #3: Try a different adapter (if applicable) to rule this out as the source of the problem.

Action #4: Make sure the batteries are fresh; this switch will not work without batteries.

Care of the Unit:

The Jumbo Switch can be wiped clean with any household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Do not submerge the unit, as it will damage the electrical components.