

---

---

## Pinch Switch #800

---

---

### USER'S GUIDE



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

[www.enablingdevices.com](http://www.enablingdevices.com)

---

## Pinch Switch

---

Great for teaching prehension skills! This versatile switch is small enough to be held in a child's hand. Activated by even the slightest pressure. Size: 3" x ¼". Weight: 2 oz.

### Operation:

1. Plug the Pinch Switch into the jack on your switch-adapted toy/device.
2. If it is necessary for you to use an adapter, make sure that you use a MONO adapter, not a STEREO adapter.
3. Make sure that the connection between the Pinch Switch and your toy/device is tight. There should be no gaps.
4. Simply press or pinch the Pinch Switch, to activate your toy/device.

The toy/device will only remain activated while Pinch Switch continues to be actuated. Once you release the switch, the toy/device will turn off.

### Troubleshooting:

**Problem:** The Pinch Switch does not activate your toy/device.

**Action #1:** Make sure that the connection between the Mirror Plate Switch and your toy/device is tight. There should be *no* gaps. This is a common error and an easy fix.

**Action #2:** Try a different switch with your toy/device to rule out the toy/device as the source of the problem.

**Action #3:** Try a different adapter (if applicable) to rule this out as the source of the problem.

### Care of Unit:

The Pinch Switch can be wiped clean with any household multi-purpose cleaner and disinfectant.

**Do not submerge** the unit, as it will damage the contents and the electrical components.

**Do not use abrasive cleaners,** as they will scratch the surface of the unit.