

---

---

## Laugh & Learn Puppy #8034

---

---

### USER'S GUIDE



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697  
[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

## Fun and interactive!

This cute puppy combines learning with musical play! He teaches body parts, colors, and the alphabet from A to Z using fun phrases and songs that are activated by pressing the touch picture pad in front of him. The touch pad is easy to press and makes interactive learning a simple and fun experience providing auditory development, body recognition, language and listening skills. Size: 13"H x 9½"W x 15"D. Requires 3 AA Batteries. Weight: 2½ lbs.

### Operation:

1. Laugh & Learn Puppy requires 3 AA Batteries to operate. Alkaline batteries must be used (e.g. Duracell or Energizer Brands). Do not use rechargeable batteries because they supply a lower voltage and the unit may not perform as well. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located on Laugh & Learn Puppy's back. First locate the Velcro opening, then remove the cover screw using a Phillips head screwdriver and install 3 AA batteries paying close attention to proper battery polarity.
3. **Note:** A plastic tab was attached to the toy for in-store demonstration purposes. While the tab may have already been removed, check the back of the toy to be sure. If the plastic tab is still attached, open the fasteners on the back of the toy and pull and remove the tab. Close the fasteners and throw the plastic tab away.
4. Replace the battery compartment cover and secure with the screw. Set the VOLUME/OFF switch, to the LOW or HIGH VOLUME setting.
5. There are two interactive play modes on Laugh & Learn Puppy. Locate the mode select switch on puppy's left foot. Press the left foot to turn the toy on and start in learning mode. Press again for music mode. Press once more to turn the toy off. (You can also press the touch picture pad in front of him to do the same functions).
6. Press the puppy's right foot, left hand, nose, Heart or right ear to hear it identified followed by a short ditty. Press again to learn a color. Press the note button on the puppy's right hand to hear the A-B-C song. Press

again to hear another fun song about colors, a counting song or a song about the parts of the body.

7. Press the puppy's right foot to hear "This Little Puppy Went to Market." Press again to hear a fun phase. Press the note button on the puppy's right hand to hear "Head, Shoulders, Knees and Toes." Press again to hear a fun phase. Press the puppy's right ear to hear "Do Your Ears Hang Low?" Press again to hear a fun phase. Press the puppy's left hand to hear "Pat-a-Cake." Press again to hear a fun phase. Press the puppy's tummy to hear "If you're Happy and You Know It." Press again to hear the puppy giggle and bark. Press the puppy's nose to hear "The Itsy-Bitsy Spider." Press again for a fun phase.

### Troubleshooting:

**Problem:** Laugh & Learn Puppy does not seem to function properly.

**Action #1:** Low battery power may affect toy function, including irregular sound and the toy may not turn off. Replace all batteries with alkaline batteries only.

**Action #2:** Make sure no object, debris are blocking or causing the picture switch pad from moving freely.

### Care of Unit:

If you will not be using Laugh & Learn Puppy for an extended amount of time, we recommend removing the batteries.

**Do not submerge** the unit in water, as it will damage the electrical components Laugh & Learn Puppy is surface washable only.

Laugh & Learn Puppy can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend using a mild soap or Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not use abrasive cleaners, as they will scratch the surface of the unit.**

**Do not submerge the unit, as it will damage the electrical components.**