
Sunshine Symphony #8069A

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

customer_support@enablingdevices.com



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

www.enablingdevices.com

Create music with one touch!

This huggable, plush activity toy plays beautiful classical music, while sparkling lights flash! Two different modes feature four classical musical compositions, activated by a simple touch or can be used in a long-play lullaby mode. Fun tactile activities include a crinkle, squeak, beads and teether. Now available in an adapted version which requires a capability switch. Size: 10½”L x 10½”W. Requires 3 AA Batteries. Weight: 1¾ lbs.

Operation:

1. Sunshine Symphony requires 3 AA alkaline batteries. unzip reveal the battery compartment. Unzip the back and carefully remove the small screw from the battery compartment cover using a Phillips head screwdriver, and lift the battery compartment cover off. Observing polarity, install 3 AA size batteries into the holder. Alkaline batteries must be used only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Replace the battery compartment cover and replace the screw.
2. Plug any capability switch into the 1/8" cord jack located on the side of the Sunshine Symphony, make sure the switch is plugged in all the way. There should be no gaps between the connections, if there is a gap the Sunshine Symphony will stay ON and your switch will have no control over the Sunshine Symphony.
3. Next set the Low/High Volume switch to your desired volume level. There are two modes of play to choose from. Set the Off/Mode 1/Mode 2 switch to the desired mode. For continuous play select mode 1. One touch on the nose or activation of your external switch activates four classical selections. Songs play for approximately one minute of captivating music and entertainment.

4. In Interactive mode 2 you will enjoy the sounds of individual instruments and transform simple melodies into beautiful orchestrated music with just a touch of your switch or the nose. The first activation of your switch or nose activates a short melody played on a solo instrument such as a violin, piano, flute or trumpet. The second activation completes the solo, and the third activation blends that instrument with a full orchestra for a complete symphonic experience.

Troubleshooting:

Problem: The unit fails to operate, or operates incorrectly.

Action #1: Disconnect the power by removing one of the batteries for 20 seconds in order to reset the unit. Re-install the batteries.

Action #2: Check your batteries – There is a 99% chance that either one is installed incorrectly and/or one is weak/dead.

Please Note: When you are finished using Sunshine Symphony, remove your external switch and turn the Sunshine Symphony OFF. This will help prevent false activations and conserve battery life. For prolonged storage we recommend removing the batteries to prevent battery drain and or battery leakage which can cause damage to Sunshine Symphony's electronics.

Care of the Unit:

Sunshine Symphony is surface washable only.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Do not submerge the unit, as it will damage the electrical components.