
3 x 5 Plate Switch #810

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

customer_support@enablingdevices.com



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

www.enablingdevices.com

A handful of fun at the touch of a switch!

Our brightly-colored plate switches respond to even the slightest touch. They are ergonomically designed so that you need only make the slightest movement to contact the sloping plate. Suction cups are provided for ease of attachment to most surfaces. *Size: 7"W x 6½"L x 1½"H. Weight: ½ lb.*

Operation:

1. The 3 x 5 Plate Switch does **not** require any batteries to operate.
2. Plug the Gum Ball Switch into the jack on your switch-adapted toy/device.
4. If it is necessary for you to use an adapter, make sure that you use a MONO adapter, not a STEREO adapter.
5. Make sure that the connection between the 3 x 5 Plate Switch and your toy/device is plugged in all the way. There should be no gaps.
6. Simply press anywhere on the 3 x 5 Plate Switch's colored top to activate your toy/device.
7. The toy/device will only remain activated while the 3 x 5 Plate Switch continues to be actuated. Once you release the switch, the toy/device will turn off.

Troubleshooting:

Problem: The 3 x 5 Plate Switch does not activate your toy/device.

Action #1: Make sure that the connection between the Gum Ball Switch and your toy/device is plugged in all the way. There should be **no** gaps. This is a common error and an easy fix.

Action #2: Try a different switch with your toy/device to rule out the toy/device as the source of the problem.

Action #3: Try a different adapter (if applicable) to rule this out as the source of the problem.

Care of Unit:

The 3 x 5 Plate Switch can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.