
Lighted Sensory Plate Switch #886

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697
customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Provides stimulating feedback!

Specially-designed for the individual who requires exceptional sensory input, this 5" x 8" bead chain and unbreakable plastic mirror will vibrate and play music when touched. The lighted version plays music and vibrates. Can also be used as an external switch without vibration, music and/or lights when connected to a toy or device. *Size: 11¾" x 8½" x 3". Requires 2 C Batteries. Weight: 1¾ lbs.*

Operation:

1. Observing polarity, install 2 "C" batteries into the battery compartment located on the top of the unit.
2. Press plate for vibration, lights and music. Or, install the cord (included) into the jack located in the rear of the unit to operate a toy or device

Troubleshooting:

If the unit fails to operate, or operates incorrectly, the following steps should be performed.

1. Check the batteries. Weak or dead batteries will cause the unit to function incorrectly or not at all. Also, be sure to check the polarity of the batteries.
2. Check to make sure that one (or more) of the bead chains is not stuck underneath the yellow plate, or obstructing the plate in any way. This will result in the plate not being able to be properly depressed.

Important Notes:

If you wish to use the unit as an independent device (not as an external switch), make sure to remove the cord and any adapters that you may be using from the plate switch. Leaving the cord and/or adapters installed will disable the vibration, lights, and music.

Care of the Unit:

The Lighted Sensory Plate Switch can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Do not submerge the unit, as it will damage the electrical components.