

---

---

## Lighted Musical Tambourine #896

---

---

### USER'S GUIDE



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697  
[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

### *Lights, music and vibration!*

Looking for a fun, exciting musical instrument? Our Lighted Musical Tambourine is it! Just swipe or slightly push the tambourine and watch the multi-colored lights flash, hear the music, and feel the vibration. The tambourine provides fantastic auditory, visual and tactile stimulation. You can use it alone as a musical instrument or use as a switch to activate any toy. Lights, music, and vibration can be turned on or off. Easy to mount on tabletops with a clamp (C-clamp sold separately). Size: 10½"L x 10½"W x 8"H. Requires 7 AA Batteries. Weight: 1¾ lbs.

1. The Lighted Musical Tambourine requires 7 AA batteries (not included). Alkaline batteries must only be used (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. The battery compartments are located under the unit's base. Gently turn the unit over to reveal 3 black battery compartments. Carefully remove the small screw from each of the battery compartment covers using a Phillips head screwdriver, and then slide the battery compartment covers off. Install AA size batteries into each holder. When installing new batteries, always be careful to observe battery polarity. Replace battery covers and screws. Never mix old and new batteries together or different brands or types together.
2. Turn the On/Off switch to On.
3. Simply push or pull the Tambourine and you will be rewarded with flashing lights, music and vibration. Release pressure from the Tambourine and the Lights, Music and Vibration will stop.
4. The Tambourine's Lights and Vibration each have their own On/Off switch to add or remove their function.
5. To use the Tambourine as a switch, attach one end of the double ended 1/8" to 1/8" male cord (included) into the back of the Tambourine. Next plug the other end of the cord into your adapted toy or device. When the Tambourine is moved the toy or device is activated simultaneously. Release the Tambourine and your toy/device will turn off.

6. **Please Note:** When used as a switch the six base LED lights, music and vibration will be deactivated, only the Tambourine's lights will still work. There are also two mounting tabs on the front of the base for clamp use if needed.

### **Troubleshooting:**

**Problem:** Lighted Musical Tambourine does not spin or light up.

**Action #1:** Check the Batteries for strength and for proper battery polarity. Replace if weak or dead.

**Problem:** Lighted Musical Tambourine does not play music or vibrate.

**Action:** Check the Batteries for strength and for proper battery polarity. Replace if weak or dead.

**Problem:** Lighted Musical Tambourine does not work at all.

**Action:** Check all Batteries for strength and for proper battery polarity. Replace if weak or dead.

**Problem:** Lighted Musical Tambourine does not activate an external toy/device.

**Action # 1:** Make sure all connections are tight.

**Action # 2:** Check your toy/device with another switch you know is working.

**Action # 3:** If an adapter is being used, it must be Mono, stereo adapters will not work.

### **Care of the Unit:**

Lighted Musical Tambourine can be wiped clean with any household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not use** abrasive cleaners, as they will scratch the surface of the unit.

**Do not submerge** the unit, as it will damage the electrical components.