
Pretty Kitten #904

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Pretty Kitten

Welcome to Our World of Plush Toys! Watch them walk, talk and make animal sounds. Cute and cuddly, these plush toys will provide you with hours of excitement! Accepts 1/8" plugs. Color may vary due to manufacturer's availability. Requires 2 AA Batteries. Weight: 3/4 lb.

Operation:

1. Pretty Kitten requires 3 AA batteries (Not included) to operate. Alkaline batteries are recommended because they last longer. Do not use rechargeable batteries because they supply a lower voltage and the unit may not perform as well.
2. Turn Pretty Kitten upside down to reveal the battery compartment. Install 3 AA batteries paying close attention to proper battery polarity.
3. Replace the battery compartment cover and secure it.
4. Connect Pretty Kitten to any external capability switch (not included) via the jack located at the end of the kitten's cord. Pretty Kitten is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure to make a tight connection. There should be no gaps.
5. Actuate your external capability switch and the Pretty Kitten will spring to life!
6. Pretty Kitten will walk, wag her tail and cry. If you pick her up, she will stop and make a cute "Mew Mew" sound.
7. Pretty Kitten will remain on while the external capability switch continues to be actuated. Once you release the external capability switch, there will be a brief delay, and then Pretty Kitten will turn off.

Troubleshooting:

Problem: Pretty Kitten does not function correctly.

Action #1: Replace the batteries paying close attention to proper battery polarity.

Action #2: Make sure that the connection between the external capability switch and the jack is TIGHT. There should be NO gaps.

Action #3: Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

Note:

Small children should be supervised when playing with this toy, as there are some small parts, which could be a choking hazard.

Care of Unit:

- Do not inhibit Pretty Kitten's movement, as this may cause irreversible damage.
- Do not lift Pretty Kitten up by her tail, head or legs, or drop Pretty Kitten.
- If you will not be using Pretty Kitten for an extended amount of time, we recommend removing the batteries.

Do not submerge the unit in water, as it will damage the electrical components.