
Adapted Garden Sprayer #9083

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Join gardening time!

Our adapted garden spray easily attaches to any wheelchair and has a flexible gooseneck mounted spraying wand, allowing the user to help maintain a healthy garden. Sprayer wand can be adjusted in length from 12 to 24 inches. Spray nozzle is also adjustable so you can adjust the spray from a very fine mist to a long range stream. Clamp included. Holds up to a gallon of water. Size 11"H x 12"W x 6"D. Requires Capability Switch and 4 D Batteries. Weight: 4¾ lbs.

Operation:

1. To install the batteries slide the battery compartment cover off, which is located just above the water tank fill cap. Next slide the battery tray out. Install 4 D cell batteries into the tray. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together. Please note to follow proper (+) & (-) battery polarity. Replace tray and cover.
2. To fill the tank, remove the screw on cap and fill the tank with water from the tap. Replace cap.
3. Plug your external capability switch (Not Included) into the female 1/8" jack located on the side of the unit. Make sure the ON/OFF/Reverse switch is set to the appropriate position e.g. ON for use with an external switch. Activating your switch will start the water flowing. Once the switch is released the water will stop. For continuous watering without an external switch, turn the built in ON/OFF switch to ON.
4. The sprayer attaches to the included flexible gooseneck mount and clamp. You can adjust the spray from a fine mist to a long range stream. The sprayer wand is telescopically adjustable from 12 to 24 inches. To adjust the length of the spray wand you must pull on the first section of the wand out, the wand will extend from its handle.

Troubleshooting:

Problem: Garden Sprayer does not turn on when switch is depressed.

Action #1: Make sure that you press all connections firmly together. Any gaps may interrupt electrical connection.

Action #2: Make sure batteries are fresh.

Action #3: Try a different switch with the sprayer to rule it out as the source of the problem.

Problem: The water does not flow.

Action #1: Check your water flow nozzle adjustment.

Action #2: Check to make sure nothing is blocking or pinching the water outlet hose.

Action #3: Check and or replace the four D cell batteries with fresh batteries.

Care of Unit:

Empty the water from The Garden Sprayer when you are finished using it.

Rain Drops can be wiped clean with any household multi-purpose cleaner and disinfectant.

Do not submerge the unit in any fluids, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.