
Pony Pal #916

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

customer_support@enablingdevices.com



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

www.enablingdevices.com

Pony Pal

Welcome to Our World of Plush Toys! Watch them walk, talk and make animal sounds. Cute and cuddly, these plush toys will provide you with hours of excitement! Accepts 1/8" plugs. Requires 2 AA Batteries. Weight: ½ lb.

Operation:

1. Pony Pal requires 2 AA batteries (Not included) to operate. Alkaline batteries are recommended because they last longer. Do not use rechargeable batteries because they supply a lower voltage and the unit may not perform as well.
2. Turn Pony Pal upside down to reveal the battery compartment. Install 2 AA batteries paying close attention to proper battery polarity. Replace the battery compartment cover and secure it.
3. Connect Pony Pal to any external capability switch (not included) via the jack located at the end of the pony's cord. Pony Pal is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure to make a tight connection. There should be no gaps.
4. Actuate your external capability switch and Pony Pal will spring to life! Pony Pal will remain on while the external capability switch continues to be actuated. Once you release the external capability switch, there will be a brief delay, and then Pony Pal will turn off

Troubleshooting:

Problem: Pony Pal does not function correctly.

Action #1: Replace the batteries paying close attention to proper battery polarity.

Action #2: Make sure that the connection between the external capability switch and the jack is TIGHT. There should be NO gaps.

Action #3: Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

Note:

Small children should be supervised when playing with this toy, as there are some small parts, which could be a choking hazard.

Care of Unit:

- Do not inhibit Pony Pal's movement, as this may cause irreversible damage.
- Do not lift Pony Pal up by his head/ears, legs or tail, or drop Pony Pal.
- If you will not be using Pony Pal for an extended amount of time, we recommend removing the batteries.

Do not submerge the unit in water, as it will damage the electrical components.