
3-Shape Switch/Music Box #920

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697
customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

3-Shape Switch/Music Box

Use to activate toys or play soothing music!

This sweet-sounding music box is activated by our popular shape switch. When the child inserts the correct shapes into place, the music box plays a pleasant tune. This teaches color and shape recognition. Every shape has a post for easy manipulation. Works as a stand-alone music box or as an external switch. If it's used as a switch, it activates a device but does not play music. Size: 10¼"L x 4¼"W x 4"H. Requires 2 AA Batteries. Weight: 1 lb.

Operation:

1. The battery holder is located under the unit. Observing polarity, install one AA battery into the battery holder. Alkaline batteries are recommended because they last longer. Do not use rechargeable batteries because they supply lower voltage and the unit may not perform as well.
2. To operate this unit as a switch connect a cord to an external toy or device via the 1/8-inch jack on the back of the unit. The 3-Shape Switch/Music Box comes with a 1/8- to 1/8-inch connector cord for activating toys or devices with 1/8-inch jacks. If you need to use a 1/4- to 1/8-inch adapter, it must be a mono adapter, not stereo.

Note: *This unit does not play music when it is connected to an external toy or device. Also, if this unit is **not** connected to an external toy or device, the connector cord must be removed from the jack or the unit will not operate properly.*

Troubleshooting:

Problem: The 3-Shape Switch/Music Box *will not* operate as a toy, but *will* operate as a switch. In other words, when all three shapes are set in place properly, the unit *will not* play music, but it *will* activate a connected external toy or device.

Action: Remove the connector cord from the jack. If the unit still does not work properly, replace the battery in the 3-Shape Switch/Music Box.

Problem: The 3-Shape Switch/Music Box *will* operate as a toy, but *will not* operate as a switch. In other words, when all three shapes are set in place properly the unit *will* play music, but it *will not* activate a connected external toy or device.

Action: Replace the batteries in the external toy.

Care of Unit:

The 3-Shape Switch/Music Box can be wiped clean with any household multi-purpose cleaner and disinfectant.

Do not submerge the unit, as it will damage the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.