
**Krazy Kats #9209 Ginger,
Sooty #9214 & Tiddles #9215**

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

customer_support@enablingdevices.com



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

www.enablingdevices.com

Guaranteed to make you laugh!

Press your capability switch and each of these Krazy Kats will bounce up and down while making five funny sounds. Requires capability switch, not included. Choose one or buy all three and save!
Size: 5½"L x 5"W x 6½"H. Requires 3 AAA Batteries. Weight: ½ lb.

Operation:

1. Krazy Kats requires 3 AAA batteries. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. Turn Krazy Kats over and open up the Velcro enclosure, then using a Phillips head screwdriver remove the screw and lift the battery cover off. Observing proper (+) & (-) battery polarity, install 3 AAA size batteries into the holder. Replace the battery compartment cover and screw.
3. Set the ON/OFF switch to the ON position. **Please Note:** Krazy Kats can work with or without the use of an external switch.
4. Connect Krazy Kats to any external capability switch via the cord input jack. Make sure all connections are pushed in all the way, there should be no gaps. Press your capability switch and each of these Krazy Kats will bounce up and down while making five funny sounds.
5. Turn Off Krazy Kats when finished using to prevent false activation and battery drain.

Please Note: Due to switch adaption Krazy Kats motion activation will not work. They can only be activated by an external switch, not included.

Troubleshooting:

Problem: Krazy Kats does not work.

Action #1: Rotate (spin) the batteries within the battery compartment to ensure a good connection. Check that all batteries are installed properly.

Action #2: Check all batteries for freshness, if weak or dead replace with new batteries. Use an alkaline battery (E.G. Duracell or Energizer brand).

Action #3: Make sure that you have plugged your switch in all the way. There should be no gaps.

Action #4: Try your external capability switches with another device to rule out the switches as the source of the problem.

Care of the Unit:

If you will not be using Krazy Kats for an extended amount of time, we recommend removing the batteries.

Do not submerge the unit in water, as it will damage the electrical components. Krazy Kats are surface washable only.